



Instruction Manual



Model: BTP2166



FM




CONTENTS

NOTES -	2
SAFETY PRECAUTIONS-	3
CHARGING INSTRUCTIONS -	4
INTRODUCTION -	5
USB OPERATION -	6
FM OPERATION -	6
WIRELESS BT OPERATION	6
WIRELESS BT CONNECTION	7
WORKING TYPE -	7
TROUBLESHOOTING -	8
SPECIFICATIONS -	8

NOTES


Do not share the power socket with another appliance.

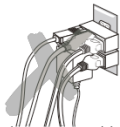

Do not disassemble, do not repair and do not assemble the appliance on your own.



If you are not using the appliance, pull the power cord out of the mains socket.

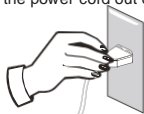

Be careful of the power cord and maintain it as appropriate. To ensure safety, do not twist the power cord, do not pull it out of the socket, do not compress it or stretch its length.



Do not use the appliance if the supply voltage is lower than 100 V or higher than 240 V. If the supply voltage is lower than 100 V, the appliance may not work and its lifetime may be affected. If the voltage is higher than 240 V, the appliance may catch on fire or cause a fire.



Do not wash the appliance or use it in the bathroom, or it may cause potential injuries and other problems.



1. This appliance must not be used by persons (including children) with physical or mental impairments or by persons with insufficient experience and knowledge, unless they are under supervision or have been instructed about the operation of the appliance by the person responsible for their safety.
2. Children should be under supervision and should not play with the appliance.
3. Do not submerge the power cord, the plug or the appliance in water or other liquids.

SAFETY PRECAUTIONS

Installation location

Leave sufficient space around the appliance of at least 5 cm from any wall/obstacle to ensure proper ventilation and prevent the appliance from overheating. The following places are not suitable installation locations for the appliance:

- an unstable location
- a location near a heat source or in direct sunlight
- a wet or dusty environment
- a small place such as bookcase or wall cabinet

Warning

To prevent suffering an electrical shock or another accident, do not operate the appliance in a rainy or humid environment.

Cleaning and maintenance

Use a soft cloth or cotton dipped in a neutral solution for cleaning the surface of appliances. Do not use the type of cloth that you use for washing dishes or aggressive chemical agents.

Storm

If the appliance is not working properly during a storm, please disconnect the plug from the power socket and reinsert it after a minute.

Do not drop small items or a liquid into the appliance. In the event that you find small items or a liquid inside the appliance, you see smoke or smell an odor, immediately disconnect the appliance from the power grid. Send the appliance to an authorized service center.

Repacking the appliance

When sending the appliance by a transport company, use the original packaging to prevent its damage during transportation.

CHARGING INSTRUCTIONS

This product is operated using a built-in rechargeable battery that can be recharged using AC power supply.

Note: Every rechargeable battery has a limited number of charge cycles. Battery life and number of charge cycles vary depending on use and settings.

Battery status	Battery indicator light
Low battery	Solid red LED
While charging	Solid green LED
Fully charged or charging stopped	Off

Charging the battery

Connect the supplied mains cable to AC power supply.

The AC input jack located on back of this unit is mainly designed for operator and charging the built-in Li-ion battery. The unit will still operate normally while charging.

The appliance must be connected to a 100-240V 50/60Hz AC supply.

Charge the built-in Li-ion battery for a minimum of 4 hours prior to first use.

Use suitable power sources. Plug the appliance into a suitable power source, as described in the operating instructions or as marked on the product's rating label.

The supply voltage should be the same as that indicated in the technical specifications and the appliance rating label.

If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.

In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plug completely.

After prolonged use, the battery voltage may discharge and operation might become intermittent. When the internal battery charge is very low, the unit will turn off automatically.

Battery Note and Care



Removal of the built-in battery may destroy the product.



Always bring your product to an authorized technical center to remove the built-in battery.

Do not burn or bury the battery.

Do not puncture, nail or disassemble the battery.

Please observe the local regulations regarding the disposal of exhausted batteries and old equipment. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.



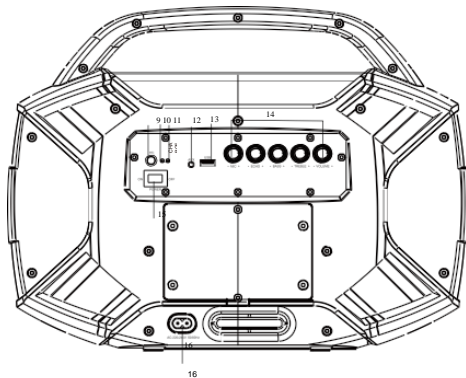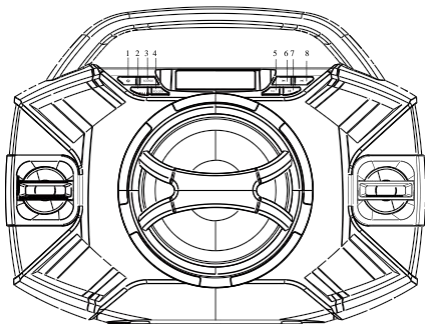



INTRODUCTION



- | | |
|--------------|--|
| 1.Standby | 10.Charging light |
| 2.Light | 11.Battery Low light |
| 3.Source | 12.AUX |
| 4.Folder | 13.USB |
| 5.10+ | 14.S. Effect (Mic -/+, Echo-/+, Bass-/+, Treble-/+, Volume-/+) |
| 6.Previous | 15.Power Switch |
| 7.Play/Pause | |
| 8.Next | |
| 9.Mic jack | 16.AC IN |



  
USB OPERATION

USB supports music USB sticks only.

	Press to choose one of five lighting effects: 1. Turn off the lights. 2. Solid red light. 3. Solid green light. 4. Solid blue light. 5. Three flashing lights changing by turn.
	Press to return to the previous track, hold to fast rewind playback.
	Press to temporarily pause a playback. Press it again to resume the playback.
	Press to skip to the next track, hold to fast forward playback.
	Press to jump the track by 10 every time
	Press to switch between different modes: WIRELESS BT, USB, AUX, FM




FM OPERATION

Press "Source" to enter FM mode.

	Press to auto scan for the broadcasting radio channels and presets of all available stations.
	Press to skip to the next station, hold to scan for available channels at higher frequency.
	Press to skip to the previous station, hold to scan for available channels at lower frequency.

WIRELESS BT OPERATION

Press "Source" to enter WIRELESS BT mode.

	Press to temporarily pause playback. Press it again to resume playback.
	Press to return to the previous track,
	Press to skip to the next track

WIRELESS BT CONNECTION

The pairing name of the unit is F&U BTP2166, press "SOURCE" button to switch to the corresponding signal source (Wireless BT), use your enabled mobile device to search and pair the unit by selecting F&U BTP2166. The unit will synchronize the playing song with your mobile device if the connection was successful. Disconnect the Wireless BT by holding "Play/Pause" on the front panel.

Note: In wireless BT mode "Play/Pause", "Next", "Previous" buttons are also active.



WIRELESS BT


WORKING TYPE

You could choose to operate by connecting with the supplied AC plug by voltage of 100-240V or by the rechargeable battery inside as well.

1. When the battery status is low, the red indicator light on the back panel will remind you to recharge the unit.

2. When the unit is under charging, the charge indicator light will stay solid green.

3. When the unit is fully charged, the indicator light will be out.

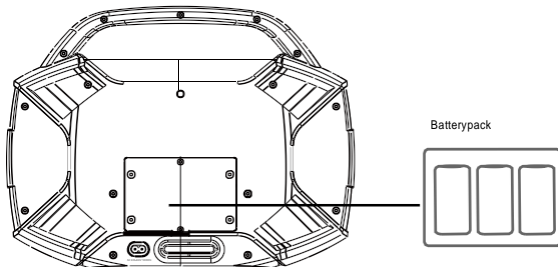

TROUBLESHOOTING

In the event of problems with the system and before taking it to an authorized service center, please check the following:

Malfunction	Inspection and action
No power supply	<ul style="list-style-type: none">• Please check the power cord is inserted into a working power socket.• Please check that the system is turned on.• Please make sure the rechargeable battery is fully charged to support work when disconnect with AC plug.
Failure	<ul style="list-style-type: none">• Press and hold the stand-by mode button (Stand by) for 5 seconds. The system will turn itself off.• Make sure the files in the USB card are in MP3/WMA format
Playback of USB, no sound or hissing	<ul style="list-style-type: none">• Make sure the downloaded file is complete and without loss.

SPECIFICATIONS

Power supply	AC ~ 100-240V 50/60Hz
Power output	RMS 25W (Speaker:6.5"+2"x1, 4 Ω , 10 %THD)
Frequency response	40Hz~20KHz
S/N Ratio	>75dB
Bluetooth compatibility	EDR, A2DP, AVRCP
Bluetooth version	V3.0
FM	87.5-108 MHz

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre. In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Amiridis-Savvidis S.A. states that this product, complies with the requirements of below directives:

RED Directive 14/53/EU

ErP Directive 2009/125/EC

RoHS Directive 11/65/EU

CE-marking Directive 93/68/EEC

The detailed declaration of conformity can be found at

www.fandu.gr



Exclusive importer in Greece:

Amiridis – Savvidis S.A.

87A, 17th Noemvriou str, P.C. 55534

Thessaloniki – Greece

T: +302310944944 | F: +302310944940

www.amiridis-savvidis.gr