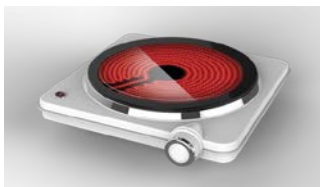

UNITED®

By **AMIRIDIS – SAVVIDIS S.A.**

ELECTRIC HOT PLATE



MODELS: CP1719 / CP1819

IMPORTANT SAFETY INSTRUCTIONS

- Please read these instructions carefully before using the appliance.
- Check that your mains voltage corresponds to that stated on the appliance.
- Never leave the appliance unsupervised when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- Never immerse the appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Should the cord be damaged, it must be replaced by a competent qualified electrician^(*).
- Before cleaning, always unplug the appliance from the power supply.
- All repairs should be made by a competent qualified electrician^(*).
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.**
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- Stand the appliance on a table or flat surface.
- Make sure the appliance has cooled down before cleaning and storing it.
- Make sure the cord never comes into contact with the hot parts of the appliance.

-
- ❑ The temperature of accessible surfaces may be high when the appliance is operating.
 - ❑ If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
 - ❑ This appliances is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and others working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
 - ❑ Make sure the appliance never comes into contact with inflammable materials, such as curtains, cloth, etc... when it is in use, as a fire might occur.
 - ❑ Be extremely careful, as oil or fat preparations might catch fire when overheated.
 - ❑ When using the appliance under an extractor hood, make sure to observe the minimal distance advised by the producer. It is even wiser to double this distance.
 - ❑ Only use the appliance for food that is supposed to be cooked.
 - ❑ The appliance cooking operation shall not longer than 1 hour.

PRODUCT CHARACTERISTICS

- Infrared ray for heating, no radiation and all cookware is compatible.
- Adjustable thermostat for different cooking methods.
- High hardness crystallite glass plate, that can be easily cleaned.
- Automatic temperature control function.
- Easy operation, with rotary temperature control switch.

USING

- Make sure the control are in the "0" position, plug in.
- Any high temperature resistant cookware with flat bottom can be used on the



appliance.

Put the food into the pot and put on the pot on the center heating place.

Remark: The better the pot, the better the cooking result. The base should be flat as possible.

- Heating select switch:
 - 1.2.3 used for Boiling and Steaming function
 - 4.5 MAX used for Baking, Frying function
- After use, turn the heating select switch to "0" position and unplug the appliance from electrical outlet.
- After using, the appliance still hot, it is suggest to warm the foods.
- Please plug off after the appliance cooled down.

CLEANING

- Please unplug before cleaning the appliance.
- Please clean the hob when the appliance cooled down.
- Wipe the ceramic glass surface with a damp cloth and a little neutral cooktop cleaner, then wipe dry with a clean cloth. Remnants of cleaner must not be left on the surface. Please do not use coarse scourers or abrasive pan cleaners.
- Please do not wash with water directly and please do not immerse into the water for cleaning.
- Please make sure the bottom of the pot should be clean to avoid dirty the ceramic hob.
- Dot use any caustic, abrasive cleaners! The surface could be damaged.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

This product complies with the requirements of the directives

EMC Directive 04/108/EC

Low Voltage Directive 06/95/EC

ErP Directive 09/125/EC

RoHS2 Directive 11/65/EU

declare the compliance with the following norms:

EN 55014-1:06+A1:09+A2:11

EN 61000-3-2:06+A1/A2:09

EN 61000-3-3:08

EN 55014-2:97+A1:01+A2:08

EN 60335-2-9:03+A1:04+A2:06+A12:07+A13:10

EN 60335-1:02+A11/A1:04+A12/A2:06+A13:08 +A14:10+A15/11

EN 62233:08

IEC 62321:08

EXCLUSIVE IMPORTER IN GREECE:

Amiridis – Savvidis S.A.

87A, 17th November Str. - P.C. 55535

Pylaia - Thessaloniki - Greece

T: +302310944944 | F: +302310944940

www.amiridis-savvidis.gr