 


UNITED®

By AMIRIDIS – SAVVIDIS S.A.

Electric Oven with 2 Hot-plates

INSTRUCTION MANUAL

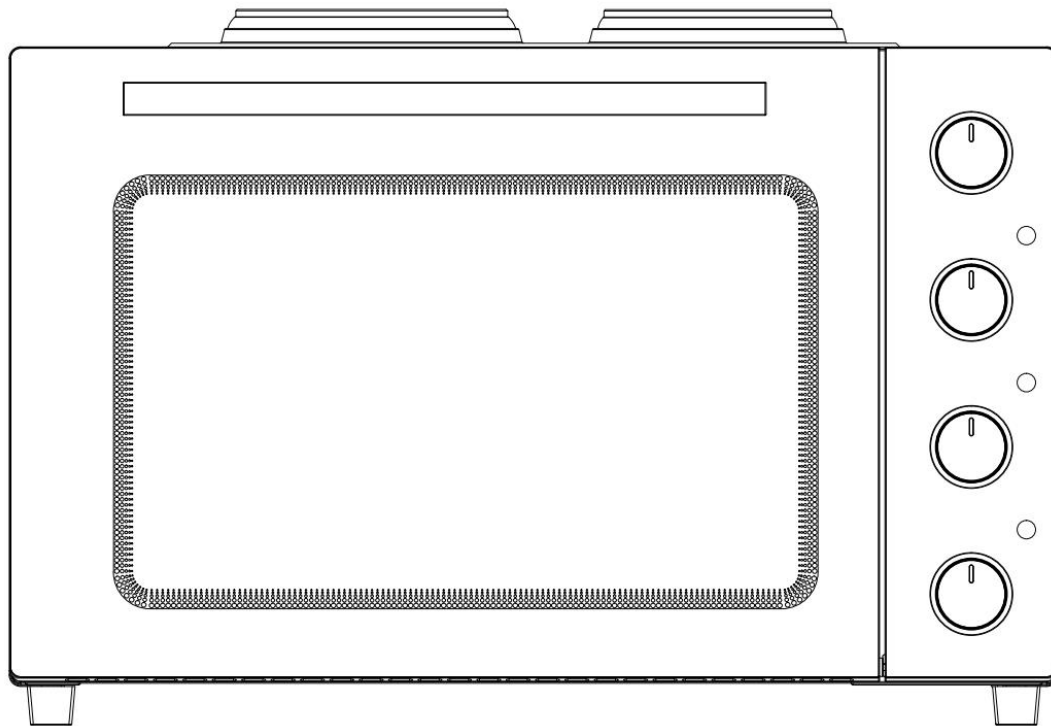

Model: EO-9738

Thank you for your purchase of this appliance. To confirm correct operation and your safety, please read this manual carefully before use and retain it for further reference

FOR HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven, or in a microwave oven.
9. When operating the oven, keep at least 12 cm of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use, or before cleaning. Let it to cool down before putting on or taking off parts, or before cleaning.
11. Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
12. Extreme caution should be exercised when removing tray or disposing of hot grease or other hot liquids.
13. Do not clean the oven with metal scouring pads. Metal chippings would touch electrical parts, and endanger a risk of electric shock.
14. A fire may occur if the oven is covered by or placed near the flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
18. To disconnect, turn any control to "off" , then remove plug from wall outlet. Always hold the plug, but never pull the cord.
19. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
20. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Avoid scratching door surface or nicking edges. If the door glass has a scratch or nick, contact the nearest Authorized Service Center for examination and repair.
21. Do not use outdoors.
22. Do not use appliance for other than intended use.
23. This appliance is for HOUSEHOLD USE ONLY.
24. The accessible surfaces are liable to get hot when the appliance is operating.
25. Glass Door cannot support goods in the fully open position.

26. The appliance is not intended to be controlled by an external timer or separate remote-control system.
27. If the surface of the hotplate is cracked, switch off the appliance to avoid the possibility of electric shock. Return appliance at the nearest Authorized Service Center for repair.
28. Caution, hot surface! The temperature of accessible surface may be high when the appliance is operation. Do not touch hot surfaces. Use handle or knobs.
29. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
30. Children should be supervised to ensure that they do not play with the appliance.
31. For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its services agent or similarly qualified persons in order to avoid a hazard.
32. Rear surface of appliances should be placed against a wall.

SAVE THESE INSTRUCTIONS

Before using your cooker for the first time, be sure to:

1. Read all instructions included in this manual.
2. Make sure oven is unplugged and thermostat knobs are in the off position.
3. Remove all racks and pans. Wash the racks and pans in hot sudsy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new cooker.


When begin to use:

1. Confirm the marked power consumption is in conformity with your household electric power.
2. Do not let cord hang over edge of table or counter to avoid that children may stumble over.
3. If the supply cord is damaged, the oven should not be used before it is repaired.
4. Oven should be sent to the manufacturer, authorized service agent or a similarly qualified person to repair, in order to avoid a hazard.

This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:

1. The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or table top where they can be pulled on by children or tripped over accidentally.

COMPONENTS:

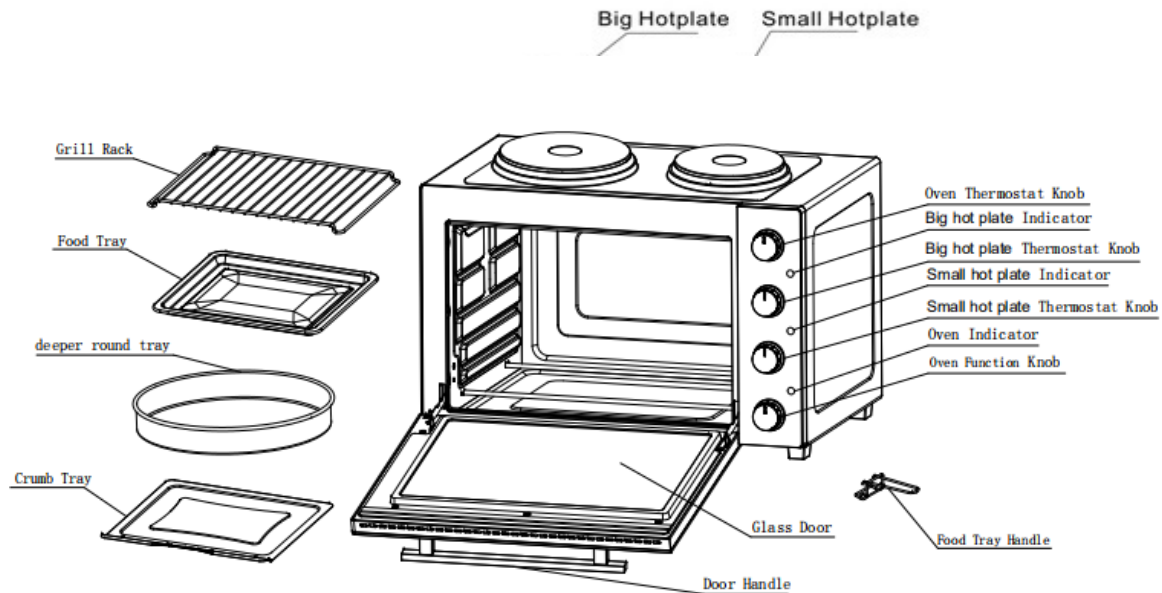

Big Hotplate ($\Phi 185\text{mm}$): Use for cooking various casserole dishes and other desired use.

Small Hotplate ($\Phi 155\text{mm}$): Use for cooking various casserole dishes and other desired use.

Control Panel: Temperature Knob, Big Hotplate Knob and Small Hotplate Knob, Function Knob, Big Hotpot Indicator, Small Hotplate Indicator, Oven Power.

Grill Rack: For toasting, baking, and general cooking in casserole dishes and loading food tray.

Food Tray: For use in broiling and roasting various foods that contain water or will release water or oil during cooking.

Round Tray: For use in broiling and roasting various foods that contain water or will release water or oil during cooking.


Food Tray Handle: Allows you to pick up Food Tray and Grill Rack to avoid any scald.

Door handle: Cool handle to avoid any scald.

Glass Door: Transparent tempered glass allows you to view the cooking process conveniently.

Crumb Tray: For use in holding crumbs during the cooking.

CONTROL PANEL

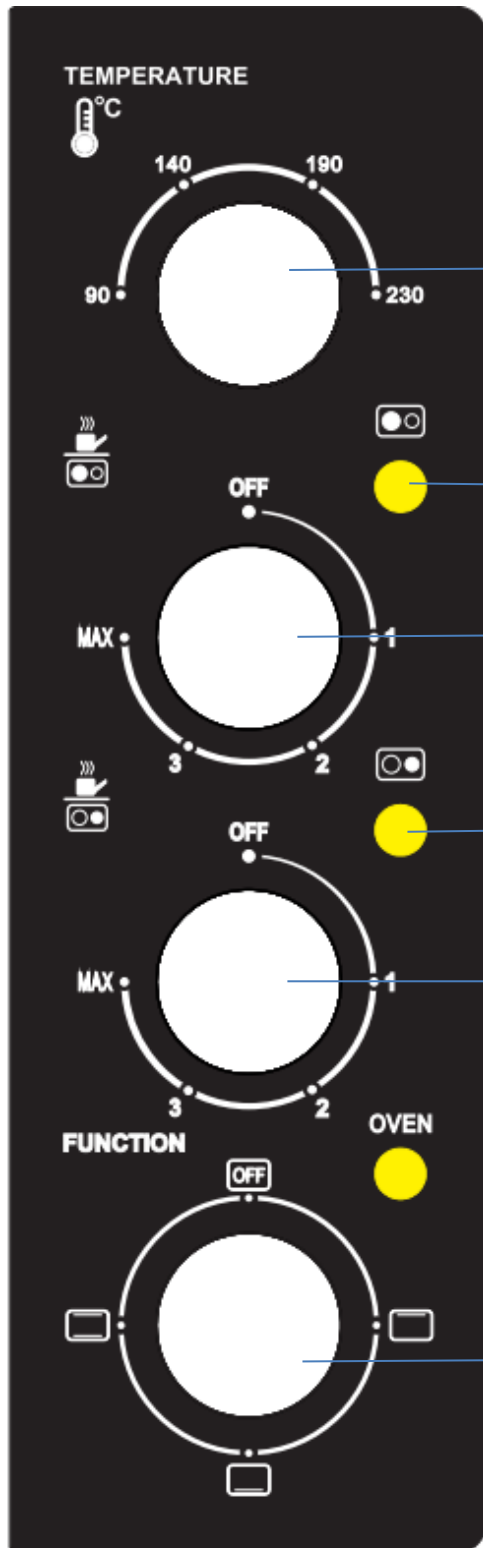





Temperature Knob: the temperature choice is from 90 to 230°C. You could select desired temperature according to the practical use

Big Hotpot Indicator

Big Hotplate Knob: The temperature of big hotplate could be adjustable. You could select desired temperature according to practical use

Small Hotpot Indicator

Small Hotplate Knob: The temperature of small hotplate could be adjustable. You could select desired temperature according to practical use

- Function Knob: Select working modes**
-  Keep at "Off" when cooker not in use
 -  Upper heating element only
 -  Lower heating element only
 -  Upper + Lower heating elements

OPERATION INSTRUCTION:


Using Your Oven:


Using Your Hotplate


Please familiarize yourself with the following oven functions and accessories prior to first use:

- Oven Temperature Control Knob: When you turn to activate this thermostat, the unit can work. You turn to the right (clockwise) to choose the desired 230°C for baking, broiling or toasting.
- Big Hotplate Control Knob: When you turn to activate this thermostat, the big hotplate can work. You turn to the right (clockwise) from “OFF” to “1”, the big hotplate will start working.
- Small Hotplate Control Knob : When you turn to activate this thermostat, the small hotplate can work. You turn to the right (clockwise) from “OFF” to “1”, the small hotplate will start working.
- Hotplate Indicator Light: It will light when each hotplate is turned on.
- Function Control Knob: This oven is equipped with 4 positions for a variety of cooking needs:

1.:  OFF

2.:  For broiling fish, steak, poultry, pork chops, etc. (upper heating)

3.:  For baking cakes, pies, cookies, poultry, beef, pork, etc. (lower heating)

4.:  For toasting bread, muffins, frozen waffles, pizza ,etc. (upper & lower heating)

- **Bake Tray:** For use in broiling and roasting meat, poultry, fish and various other foods.
- **Tray Handle:** Allows you to pick up the wire rack and bake tray when they are hot.
- **Wire Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.



CAUTION:

To avoid risk of injury or burns, do not touch hot surfaces when oven is in use. Always pay extreme care when removing bake tray, wire rack or any hot container from a hot oven. Always use the tray handle, or an oven mitt when removing hot items from the oven.

BROIL

For the best results, it is recommended that your preheat the oven for 15 minutes on 230°C.

Operation

- Set the temperature control to 230°C.
- Turn function control to the 2nd position and preheat the oven.
- Place the wire rack on top of the bake tray.
- Place food on the wire rack.
- Food should be placed as close as possible to the top heating element without touching it.
- Set temperature control to appropriate temperature.
- Brush food with sauces or oil, as desired.
- It is advisable to leave the door slightly ajar.

- Turn food over midway through the desired cooking time.
- When broiling is completed, turn the function control knob to the "OFF" position.

TOAST

Please note that the TOAST function uses all the heating elements. Large capacity oven allows for toasting 4 to 6 slices of bread, 6 muffins, frozen waffles or frozen pancakes. When toasting only 1 or 2 items, place food on the bake rack in the center of the oven.

Operation

- Set the temperature control to 230°C.
- Turn the function control knob to the 4th position.
- Place food on the wire rack.
- When toasting is completed, turn the function control knob to the "OFF" position.

Note: Wire Rack should be positioned in the middle of the oven with the indentations pointing down.

BAKE

Please note that the BAKE function mainly uses the heat from bottom heating elements. For the best results, it is recommended that you preheat the oven for 15 minutes on 230°C.

Operation

- Set the temperature control to 230°C.
- Turn function control to the 3rd position and preheat the oven.
- Place the wire rack on the lowest or middle rack support guide.
- Place food on the wire rack.
- Food should be placed as close as possible to the lower heating element without touching it.
- Set temperature control to appropriate temperature.
- Brush food with sauces or oil, as desired.
- It is advisable to leave the door slightly ajar.
- Turn food over midway through the desired cooking time.
- When baking is completed, turn the function control knob to the "OFF" position.

How to use your Hotplates

Cooking Utensils

1. Cooking gears that can be placed on top of the heater to heat food includes all utensils made of ferrite element such as enamel, cast or stainless steel with a smooth base which diameter in 90--180mm, have a flat bottom and are covered with lid.
2. Utensils that should not be used to heat food include that is made of aluminum or copper; and containers with a base diameter no more than hotplate set value.

SMALL HOTPLATE

Operation:

- Place utensil on the hotplate.
- Turn the small hotplate control knob to the right (clockwise) from "OFF" to "1", the small

hotplate will start working. The small hotplate can work from “1” to “MAX”.

- When cooking is completed, turn the small hotplate control knob to “OFF”.

BIG HOTPLATE

Operation:

- Place utensil on the hotplate.
- Turn the big hotplate control knob to the right (clockwise) from “OFF” to “1”, the big hotplate will start working. The big hotplate can work from “1” to “MAX”.
- When cooking is completed, turn the big hotplate control knob to “OFF”

CARE & CLEANING

ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING

Your oven features a quick-clean coating. If desired, wipe walls with damp cloth. Do not use steel wool scouring pads, abrasive cleaners, or scrape walls with metal utensils as this may damage the quick-clean interior. Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door clean with a damp cloth and wipe dry with a paper or cloth towel.

SPECIFICATION

Power Consumption:	230V~ 50/60Hz
Oven Output:	1500W
Big Hotplate Output:	1000W
Small Hotplate Output:	700W
Total Output:	3200W
Oven Capacity:	35Litres

NOTICE ABOUT RECYCLING

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.



This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling center.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, below company states that this product, complies with the requirements of below directives:

EMC-Directive: 14/30/EU

Low Voltage Directive: 14/35/EU

ErP Directive: 09/125/EC

CE-Marking Directive: 93 / 68 / EEC

RoHS Directive: 11/65/EU & 15/863/EU

The detailed declaration of conformity can be found at

www.united-electronics.gr



KALLIOPI KARIDA & CO., LP

87A, 17is Noemvriou str, P.C. 55535

Pylaia, Greece

T: +302316006600 | F: +302316006650

www.united-electronics.gr