 


UNITED®

By AMIRIDIS – SAVVIDIS S.A.

Electric Oven with 3 Hot-plates

INSTRUCTION MANUAL

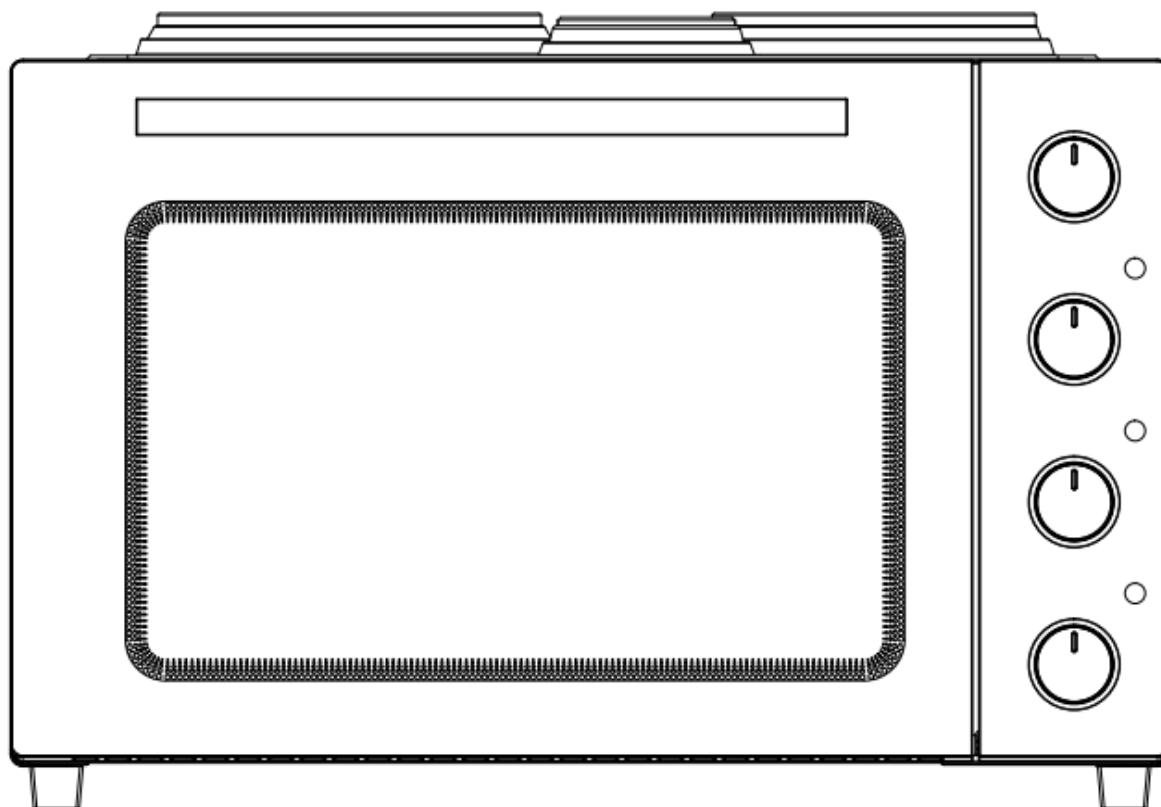

Model: EO-9739

Thank you for your purchase of this appliance. To confirm correct operation and your safety, please read this manual carefully before use and retain it for further reference.

FOR HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven, or in a microwave oven.
9. When operating the oven, keep at least 12 cm of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use, or before cleaning. Let it to cool down before putting on or taking off parts, or before cleaning.
11. Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
12. Extreme caution should be exercised when removing tray or disposing of hot grease or other hot liquids.
13. Do not clean the oven with metal scouring pads. Metal chippings would touch electrical parts, and endanger a risk of electric shock.
14. A fire may occur if the oven is covered by or placed near the flammable material, including curtains, draperies, walls etc, when in operation. Do not store any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
18. To disconnect, turn any control to "off" , then remove plug from wall outlet. Always hold the plug, but never pull the cord.
19. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
20. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Avoid scratching door surface or nicking edges. If the door glass has a scratch or nick, contact the nearest Authorized Service Center for examination and repair.
21. Do not use outdoors.
22. Do not use appliance for other than intended use.
23. This appliance is for HOUSEHOLD USE ONLY.

24. The accessible surfaces are liable to get hot when the appliance is operating.
25. Glass Door cannot support goods in the fully open position.
26. The appliance is not intended to be controlled by an external timer or separate remote-control system.
27. If the surface of the hotplate is cracked, switch off the appliance to avoid the possibility of electric shock. Return appliance to the nearest Authorized Service Center for repair.
28. **Caution, hot surface!** The temperature of accessible surface may be high when the appliance is operation. Do not touch hot surfaces. Use handle or knobs.
29. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
30. Children should be supervised to ensure that they do not play with the appliance.
31. For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its services agent or similarly qualified persons in order to avoid a hazard.
32. Rear surface of appliances should be placed against a wall.

SAVE THESE INSTRUCTIONS

Before using your cooker for the first time, be sure to:

1. Read all instructions included in this manual.
2. Make sure oven is unplugged and thermostat knobs are in the off position.
3. Remove all racks and pans. Wash the racks and pans in hot sudsy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new cooker.

 
When begin to use:

1. Confirm the marked power consumption is in conformity with your household electric power.
2. Do not let cord hang over edge of table or counter to avoid that children may stumble over.
3. If the supply cord is damaged, the oven should not be used before it is repaired.
4. Oven should be sent to the manufacturer, authorized service agent or a similarly qualified person to repair in order to avoid a hazard.

This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:

1. The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or tabletop where they can be pulled on by children or tripped over accidentally.

COMPONENTS:

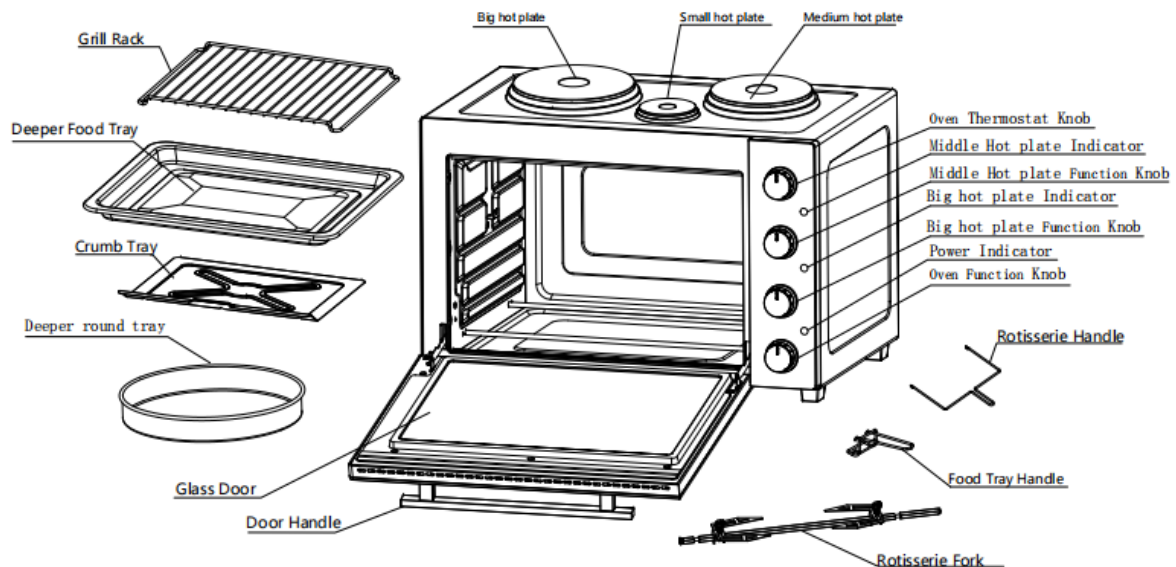

Big Hotplate (Φ 180mm): Use for cooking various casserole dishes and other desired use.

Medium Hotplate (Φ 145mm): Use for cooking various casserole dishes and other desired use.

Small Hotplate (Φ 90mm): Use for cooking coffee or milk.

Control Panel: Temperature Knob, Small and Medium Hotplate Knob, Big Hotplate knob, Oven Function Knob, Small and Medium Hotplate Indicator, Big Hotplate Indicator, Oven Power indicator

Deeper Food Tray (50mm) : For use in broiling and roasting various foods that contain water or will release water or oil during cooking.

Rotisserie Fork: Can cook up a 3-pound roast or chicken.

Rotisserie Handle: Use for removing hot Rotisserie Fork from oven.

Round Tray: For use in broiling and roasting various foods that contain water or will release water or oil during cooking.

Food Tray Handle: Allows you to pick up food tray and grill rack to avoid any scald.

Door handle: Cool handle to avoid any scald.

Glass Door: Transparent tempered glass allows you to view the cooking process conveniently

 
Grill Rack: For toasting, baking, and general cooking in casserole dishes and loading food tray.

Crumb Tray: For use in holding crumbs during the cooking.

Note: Wire Rack should be positioned with the indentations pointing down.



CONTROL PANEL

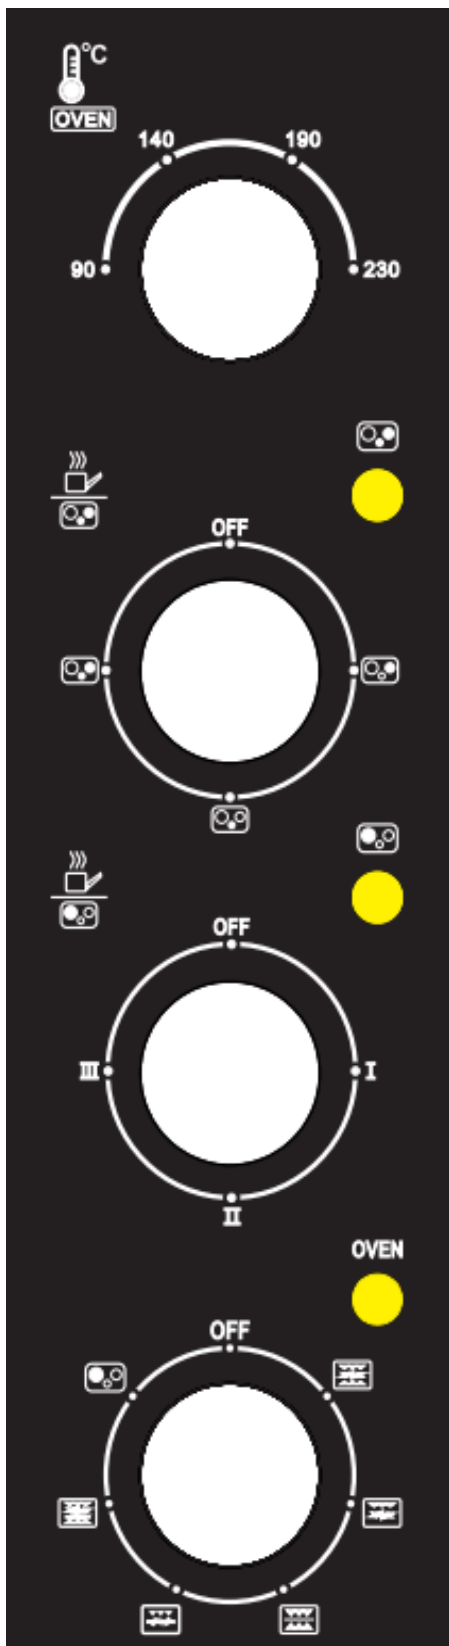








Temperature Knob: the temperature choice is from 90 to 230°C. You could select desired temperature according to the practical use

Medium/Small Hotpot Indicator

Medium/Small Hotplate Knob: Turn this knob to use small or medium hotplate

Big Hotpot Indicator

Big Hotplate Knob: The temperature of big hotplate could be adjustable. You could select desired temperature according to practical use

- Function Knob: Select working modes**
-  Keep at "OFF" when cooker not in use
 -  Dual heating element + Convection
 -  Upper heating element + Convection
 -  Upper + Lower heating elements
 -  Upper heating element + Rotisserie
 -  Dual elements + Rotisserie + Convection
 -  Big hotplate

OPERATION INSTRUCTION:

- a. Select cooking mode with Function Knob.
- b. You can use hotplate knobs to adjust medium/small hotplate.
- c. Turn the function knob to big hotplate, then use 3rd knob to control the wattage of big hotplate.
- d. Use temperature knob to select your desired temperature.

Using Your Oven:

1. Place the food on grill rack or Food tray and close the oven door.
 - Do not use any paper or plastic container.
 - Use Food tray for any food with small size or likely to drip while cooking.
 - Place the food evenly on the grill rack.
2. Insert the power plug into the socket.
3. Set the cooking function and desired temperature.
4. When cooking finished, turn the function knob to '**OFF**', use food tray handle or oven mitts to remove hot food to avoid any scald.
5. While using your oven, you can use small/medium hotplate knob to control medium hotplate and small hotplate. If you do not want them to operate at the same time with the oven, keep at '**OFF**' position.
6. Use oven function knob to choose big hotplate, then turn the 3rd knob to choose desired wattage. '**I**' for 500W, '**II**' for 1000W, '**III**' for 1500W.
7. Remove the power plug from the socket after cooking.

Using Your Hotplate


Hotplate could be used to cook various casserole dishes.

Cooking Utensils

1. Cooking gears that can be placed on top of the heater to heat food includes all utensils made of ferrite element such as enamel, cast or stainless steel with a smooth base which diameter in 90--180mm, have a flat bottom and are covered with lid.
2. Utensils that should not be used to heat food include that is made of aluminum or copper and containers with a base diameter no more than hotplate set value.


SMALL HOTPLATE

Operation:

- Place utensil on the hotplate.
- Turn the medium and small hotplate control knob from '**OFF**' to , the small hotplate will start working. Wattage of small hotplate is not adjustable.
- When cooking is completed, turn the control knob to '**OFF**'.


MEDIUM HOTPLATE

Operation:

- Place utensil on the hotplate.
- Turn the medium and small hotplate control knob from “OFF” to , the medium hotplate will start working. Wattage of medium hotplate is not adjustable.
- When cooking is completed, turn the control knob to “OFF”.

SIMULTANEOUSLY OPERATION OF MEDIUM AND SMALL HOTPLATE

Operation:

- Place utensils on the hotplates.
- Turn the medium and small hotplate control knob from ‘OFF’ to , the medium and small hotplate will start working. Wattage of these hotplates is not adjustable.
- When cooking is completed, turn the control knob to ‘OFF’.

BIG HOTPLATE

Operation:

- Place utensil on the hotplate.
- Use function knob to choose big hotplate, then turn the 3rd knob to choose desired wattage. ‘I’ for 500W, ‘II’ for 1000W, ‘III’ for 1500W.
- When cooking is completed, turn the big hotplate control knob to ‘OFF’.

Note: The weight of the food which is put on the Food Tray/Grill Rack can not be over 3.5kg.

The food cannot concentrate on one side of the Food Tray/Grill Rack, you would better put it on the Food Tray/Grill Rack evenly

CARE & CLEANING

ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING

Your oven features a quick-clean coating. If desired, wipe walls with damp cloth. Do not use steel wool scouring pads, abrasive cleaners or scrape walls with metal utensils as this may damage the quick-clean interior. Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door, clean with a damp cloth and wipe dry with a paper or cloth towel.

SPECIFICATION

Power Consumption: 230V~ 50/60Hz
Total Output Power: 3350W
Big Hotplate(Φ180) Output: 1500W
Medium Hotplate(Φ145) Output: 1000W
Small Hotplate(Φ90) Output: 550W
Oven Output: 1800W
Oven Capacity: 48Litres

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, we state that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

ErP Directive 09 / 125 / EC

CE-Marking Directive: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at

www.united-electronics.gr



KALLIOPI KARIDA & CO, LP

87A, 17is Noemvriou str,

P.C. 55534 Pylaia, Greece

T: +30 2316 06600 | www.united-electronics.gr