



INSTRUCTION MANUAL

Models:
FLG50141QL

IMPORTANT



Please read this manual carefully before installing and operating the TV.

Keep this manual handy for further reference.

Content

Safety Information	1
Important Safety Precautions	1
TV Buttons And Terminal Interface	2
External device connection diagram.....	2
TV Install And Connect.....	3
TV Stand Installation Instructions	3
Initial Setup.....	4
1. Initial Setup.....	4
2. HOME.....	8
3. Settings.....	9
4. About	10
5. TV Source setting	11
6. Accounts & sign-in	12
Help	13
Remote control.....	15

Safety Information




	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating instructions in the literature accompanying the appliance.
	Warning The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user for the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove the cover of the cabinet, refer servicing to qualified service personal

If the TV is modified or altered in any way, this may result to an electric shock. Do not attempt to open the device for maintenance. The customer should contact a service centre if a repair is needed.

Important Safety Precautions

- 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.
- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time. Caution:
- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. 
- 15) The mains plug is used as disconnect device and it shall remain readily operable.
- 16) The wall socket shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be supplied with 0.5 A under normal operation. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.
- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 25) The maximum using environment temperature is 45 degrees C.
The maximum operating altitude is 2000 meters.

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only a schematic representation of the functions. The actual position and arrangement of icons in different models may be different.

One key:



Press this button in standby mode to turn on / off the TV.

Terminal Interface

 
Note: The following are the various terminal interfaces, the actual position and arrangement, as well as the number inf different models may be different.

	AV Input External AV signal input and relevant right/left sound channel		USB input Connect a USB device here to play its media files or to record programs via the PVR function.
	HDMI input Digital signal input from HDMI video connector.		OPTICAL output Connect the SPDIF receiver.
	ANT 75 Connect the antenna/cadle TV input (75VHF/UHF)		RJ45 Connect the Internet.
	CI SLOT The card reader input CI (common interface). This requires CAM (conditional access module) used for pay TV.		





*Do not touch or be close to the HDMI, USB terminals, and prevent electrostatic discharge to disturb these terminals while in USB operation mode, or it will cause the TV to stop working or abnormal status.

External device connection diagram

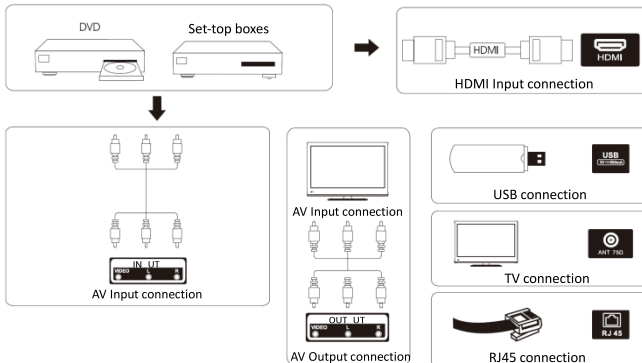

TV Install And Connect

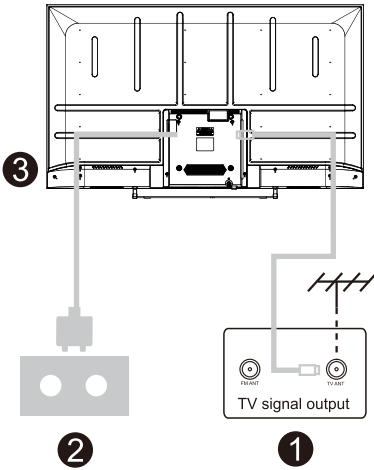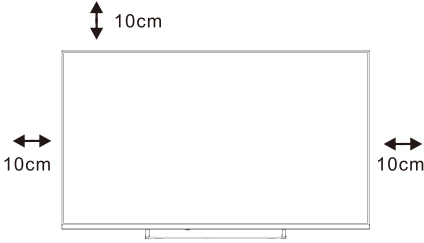  

Set your TV

Place your TV on a firm place which can bear the weight of the TV. To avoid danger, please don't position the TV near water or heating source (such as light, candle, heating machine). Do not block the ventilation openings at the back of TV.

 
Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. Plug the power cord of TV (AC 100-240V-50/60HZ).

Turn on the TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV.

Note: If the model has a CI card slot on its top, a silicone plug for the CI card slot can be found in the accessory bag (for models without CI card slot, there is no such silicone plug), please insert the silicone plug into the slot when the CI card is not in use.




Note: Picture for reference purposes only.

TV Stand Installation Instructions

1. Open the carton and remove the TV and scattered accessories and stand (some models come without a stand).
2. In order to avoid damaging the TV, please cover it with a soft cloth, put it on the table, face down on the soft material and screw the neck of the stand to the TV.
3. Screw the stand and connect it to the TV.
4. The installation is complete.


Note:

 Picture for reference purposes only.
Physical appearance prevails at all times.

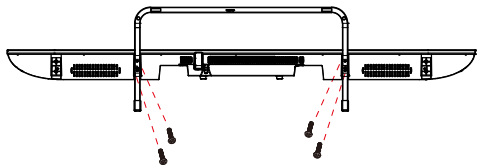


Suggestion:

 To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

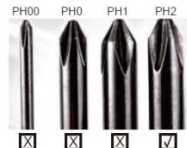

Initial Setup

 NOTE: This interface is pushed by Google Service according to the actual region. Some regions may not have this interface. The actual push by Google Service prevails.

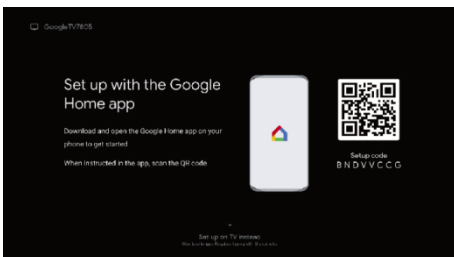


1.3.2 Set up basic TV

Press "OK" button to enter the next page to select your wifi network.


1.3.2.1 Configure the Wi-Fi network

 Press A/V buttons to select the Wi-Fi you wish to connect to, enter the password and then confirm to connect. If you select "Skip", this could be performed in homepage or settings menu.

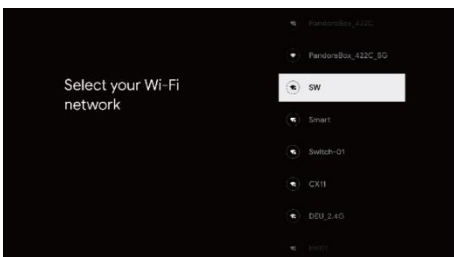

1.4 Terms of Service

 
By accepting the Google Terms of Service to improve the product experience, Select "Accept" to proceed with this condition.

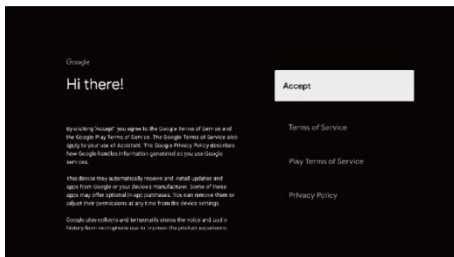

1.5 Google Services


Select "Accept" to confirm if you want your location identified on your Google TV™ and agree to automatically send diagnostic information to Google to help improve your Google experience.

 Initial Setup

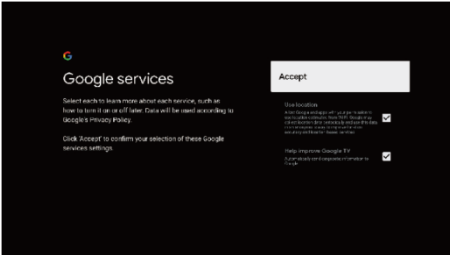


1.6 Pairing Bluetooth Remote

 1. Press "BACK ←" and "Home" 🏠 " simultaneously on the remote control to enter the Bluetooth pairing mode. The indicator light on remote control will flash when starting the pairing mode.
2. Select the 'Skip' icon to skip the pairing mode.

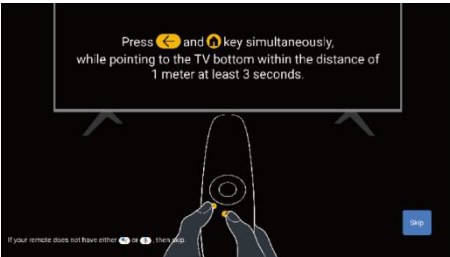


1.7 Password set up

 Press "OK" button to set up the password.

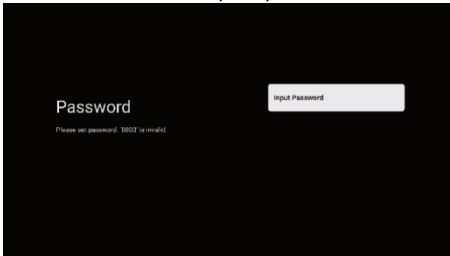

1.8 Select TV mode (Home/Retail)

 
Please make sure in this step to select "Home" if you are using this TV for use at home. Make sure to confirm once you have selected "Home".

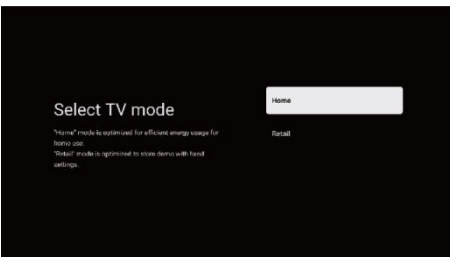

Initial Setup

1. Google Cast built-in™


 
Select On/Off to make Google Cast built-in always available.

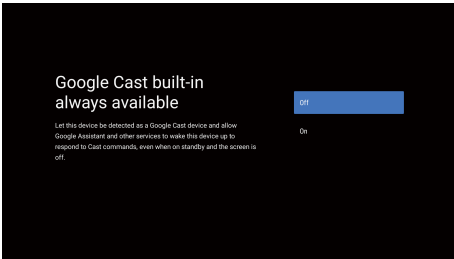


1.10 Tuner mode Setting

Select Antenna/Cable/Satellite to scan TV channel.

  If you select "Skip", the channel scan could be performed in menu.

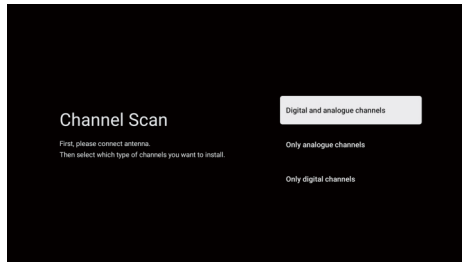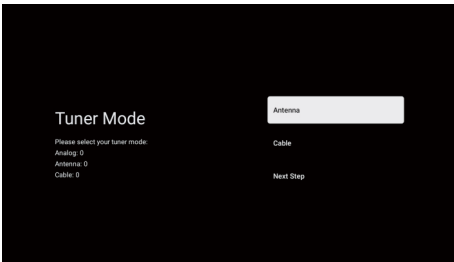


 
1.11 Setup completed and Disclaimer Terms

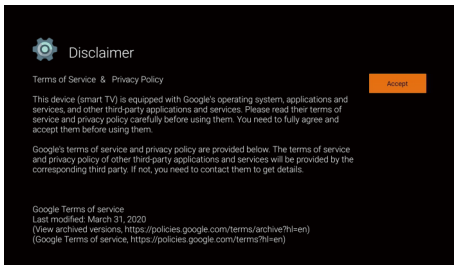

1.12 Play Auto Installs


Select install or un-install the recommended apps and Google apps by using this process.

  
Select "Start exploring" to the next page.

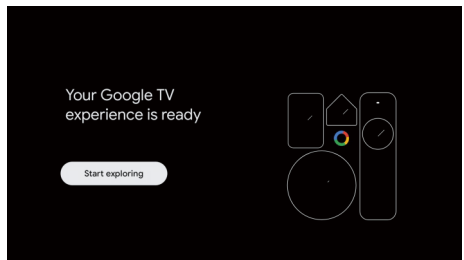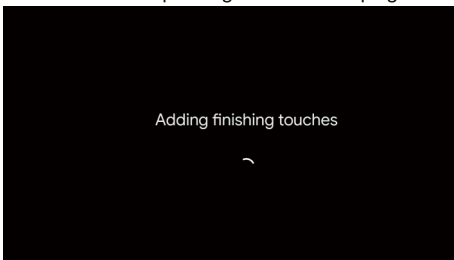

Home

2. HOME

 Once you have completed initial setup, you will now enter the home by screen or press  button to display the homepage.

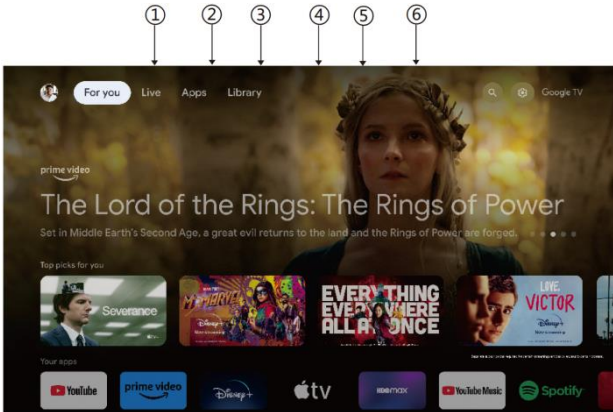

*Some countries home screen UI may display different from the image above. Please refer to the actual product for details.

1. Search

Use your voice to jump to shows, control devices, and more—just ask Google.

2. For you

Selected the “For you” to browse content from across your apps, intelligently organized just for you.

3. Movies & 4. Shows

Discover new movies and shows from across your subscriptions. Suggestions based on what you've watched and what interests you make it easier to find your next favorite.

5. Apps

Select “Apps” to have access to all your applications. Pre-installed applications are available for you in this row.

6. Library

One list for all your discoveries. When you see an interesting show or movie, add it to your Watchlist to keep track of your new discoveries.

Settings

3. Settings

Allows to set various performance settings of your TV .

 
1. Press < / > button to select "Settings" which is in the upper right corner of the screen.
2. Press Λ / V button to select the option which you want to adjust in the Settings menu.
3. Press "OK" to enter.



Channel and inputs

Display the scan sub-menu based on different channel installation modes.


1. Press Λ / V button to select "Channel Source" & Inputs".
2. Press "OK" to enter "Channels", then press Λ / V choose Analog, Antenna, Cable etc to scan the channels.
3. Press Λ / V button to select "Inputs", press [OK] to enter "Inputs", then press Λ / V to choose HDMI1, HDMI2, HDM3, HDMI4, Composite etc.

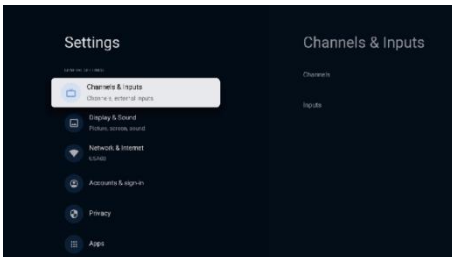

Network & Internet

Adjust all network settings and check connections if you have connection problems.

 1. Press Λ / V button to select "Network & Internet" in the settings menu.
2. Press Λ / V button to select: Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

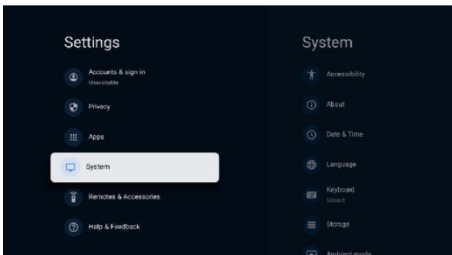


System

1. Press Λ / V button select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset and others.
2. Press "OK" to jump to the corresponding sub-option.

Settings

4. About

 
1. Press **Λ/V** button to check additional information such as System update, Device name, Restart, Status, and more.
2. Press **←** button to return to the previous menu.
3. Press **←** button to exit the menu.

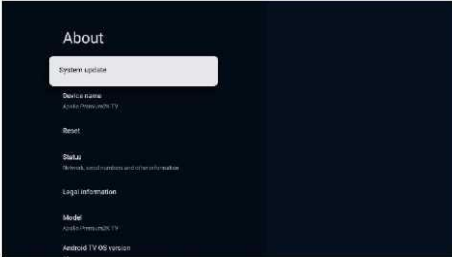

* The above pictures are for reference only, please refer to the actual product for details.

Factory reset

 If Factory reset is selected, it will erase all data from your device's internal storage, including: your Google Account, system and app data and settings, and downloaded apps.

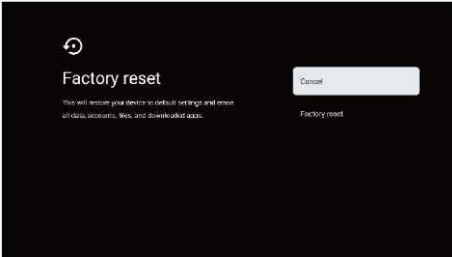


Tv Source setting

5. TV Source setting

To enter TV source in Homepage:

 1. Press **⏻** button to select input source.
2. Press **⚙️** button, then select "Channels" and select "New Channels Available" to enter.

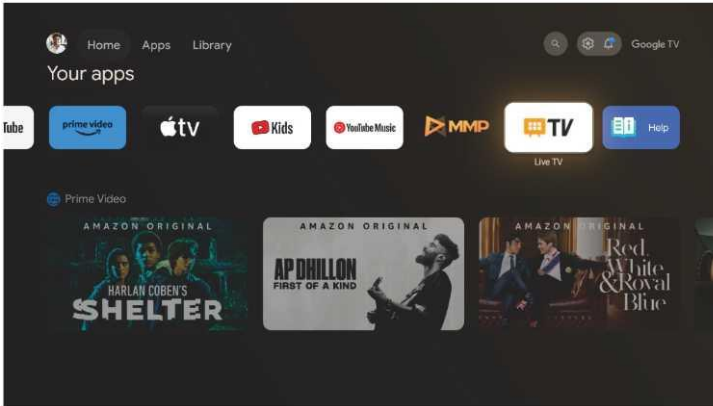


Accounts & sign-in

6. Accounts & sign-in


To have access and to download applications, you must sign in with a Google Account.



 Once you open Google Play, you will be prompted to sign in or create a new account.

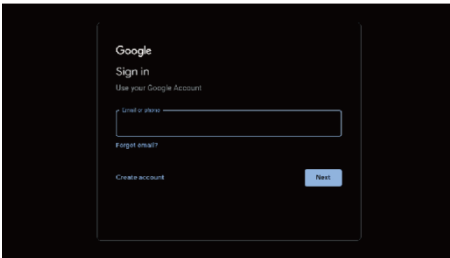

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or select the search button, and search via entering text or by asking Google on your voice remote.

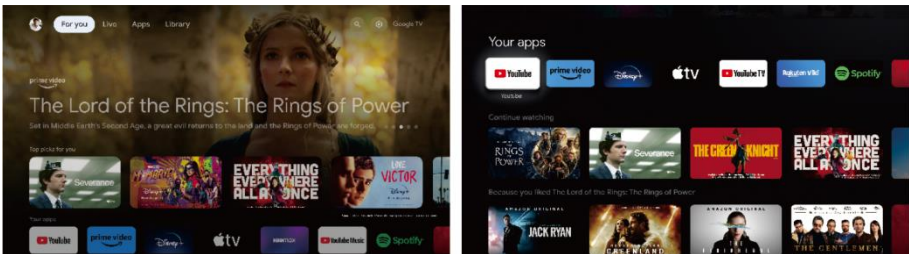

* The above pictures are for reference only, please refer to the actual product for details.

Help

No power	<ul style="list-style-type: none"> • Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.
Signal not received properly	<ul style="list-style-type: none"> • Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image manually: consult the instructions or the vernier regulation or adjust the direction of the external antenna. • If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.
No picture	<ul style="list-style-type: none"> • Check if the antenna at the back of the TV is connected properly. • View other channels to see if the problem still occurs.
Video appears with no audio	<ul style="list-style-type: none"> • Try increasing the volume. • Check if the TV's sound is on mute or not.
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> • Try adjusting the contrast and brightness.
Static noise affects video and audio quality	<ul style="list-style-type: none"> • Check if the antenna at the back of the TV is connected properly.
Broken lines on screen	<ul style="list-style-type: none"> • Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.
Remote doesn't work	<ul style="list-style-type: none"> • Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct or try using new batteries with the remote control. • The TV will go into Standby mode if it receives no response in a few minutes.
No video (PC mode)	<ul style="list-style-type: none"> • Please check if the cable is connected to the HDMI port correctly, or if the cable is bent in some places.
Vertical line blinking (PC Mode)	<ul style="list-style-type: none"> • Enter the main menu and adjust the vertical placement to eliminate the vertical line.
Horizontal tearing (PC Mode)	<ul style="list-style-type: none"> • Adjust the horizontal placement of the screen to clear any horizontal lines.
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> • Adjust the brightness or contrast in the main menu.
No response from the PC	<ul style="list-style-type: none"> • Check if the PC's display resolution is set to a compatible resolution for the TV.
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> • Make sure you are using a cable in good quality.
Problems are unresolved	<ul style="list-style-type: none"> • Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems persist, do not attempt to repair the TV by yourself. Kindly contact the service center.

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period, doing so will damage the display and may cause image burn-in.



Manufactured under license from Dolby Laboratories.
Dolby, Dolby Audio, and the double-D symbol are trademarks
of Dolby Laboratories Licensing Corporation.



The terms HDMI and HDMI High-Definition Multimedia Interface,
and the HDMI logo are trademarks or registered trademarks of
HDMI Licensing LLC in the United States and other countries.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only using furniture that can safely support the television set.
3. Ensuring the television set is not overhanging the edge of the supporting furniture.
4. Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture,
6. Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Wall-mounted screw: 22-24 inch M4, 28-70 inch M6, 75 inch M8

Note: Don't hang at an angle to avoid the risk of falling off.

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Chromecast built-in, Google Home, and other marks are trademarks of Google LLC. Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

NOTICE CONCERNING RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith we state that this product complies with the requirements of below directives:

RED Directive 2014/53/EU

ERP Directive 09/125/

RoHS Directive 2011/65 EU & EU2015/863

amended by the CE-Marking Directive 93/68/EEC

The detailed declaration of conformity can be found at www.fandu.gr

KALLIOPI KARYDA & CO LP


87A, 17th November Str. | P.C. 55535

Pylea | Greece

T: 2316006600

Web: www.fandu.gr

 Remote control

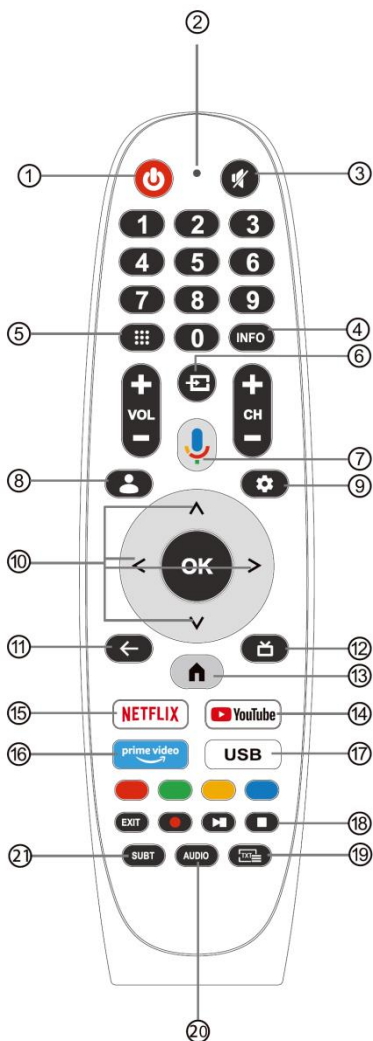

- ① Switches the TV between on and standby mode.
- ② Indicator light.
- ③ Mute or restore your TV sound.
- ④ INFO: Displays the present channel information such as the current time and channel name.
- ⑤ Apps: Open the Apps page.
- ⑥ Inputs: Display/Select signal source options.
- ⑦ Google Assistant:
Talk to Google to control your TV using your voice.
- ⑧ Kids: Switch to Kids mode.
- ⑨ Setting: In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function.
- ⑩ Navigation buttons: Cursor UP/LEFT/RIGHT/DOWN.
- ⑪ Back: Press to move back through menus.
- ⑫ Live Guide: Open the Live TV EPG.
- ⑬ HOME: Displays the home screen.
- ⑭ YouTube: Connects to YouTube (internet connection required).
- ⑮ NETFLIX: Connects to NETFLIX for viewing online TV shows and films (internet connection required).
- ⑯ Prime video: Connects to P rime video (internet connection required).
- ⑰ USB: Press to enter Multimedia Player.
- ⑱ Exit: Exit the OSD menu.
PVR: Record Live TV program.
Play/last/next program
Play/Pause/Stop program
- ⑲ TXT: Press to enter Teletext when play the program.
- ⑳ Audio: Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV program has this feature).
- ㉑ SUBT: Subtitles

*Google Assistant is not available in certain languages and countries. Availability of services varies by country and language