



# INSTRUCTION MANUAL

**Models:**  
**FLG50145QL**

## IMPORTANT

Please read this manual carefully before installing and operating the TV.

Keep this manual handy for further reference.

# Content

---

<b>Safety Information</b> .....	1
<b>Important Safety Precautions</b> .....	1
<b>TV Buttons And Terminal Interface</b> .....	2
<b>External device connection diagram</b> .....	2
<b>TV Install And Connect</b> .....	3
<b>TV Stand Installation Instructions</b> .....	3
<b>OSD</b> .....	4
1、Initial Setup .....	4
2、HOME .....	8
3、Settings .....	9
4、Tv Source setting .....	11
5、Accounts & sign-in .....	12
<b>Help</b> .....	13
<b>Specifications</b> .....	14
<b>Remote control</b> .....	15

## Safety Information



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating information in the literature accompanying the appliance.



**Warning**  
The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personnel.



If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.

## Important Safety Precautions

- 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.
- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.



Caution:

 
- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.
- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 25) The maximum using environment temperature is 45 degrees.  
The Maximum using altitude is 2000 meters

# TV Buttons And Terminal Interface

## TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.

One key:

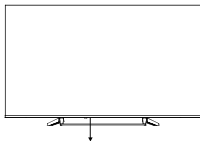

Press this button in standby mode to turn on / off the TV.

## Terminal Interface

 
Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	<b>AV input</b> External AV Signal Input		<b>USB input</b> Connect a USB device here to play its media files or to record programs via the PVR function.
	<b>HDMI input</b> Digital signal input from HDMI video connector.		<b>OPTICAL output</b> Connect the SPDIF receiver.
	<b>ANT 75</b> Connect the antenna/cable tv input (75VHF/UHF)		<b>RJ45</b> Connect the Internet.
	<b>CI SLOT</b> The card reader input CI(common interface) this requires CAM (conditional access module) used for pay TV.		





\*Do not touch or be close to the HDMI, USB terminals, and prevent electrostatic discharge to disturb these terminals while in USB operation mode, or it will cause the TV to stop working or abnormal status.

## External device connection diagram

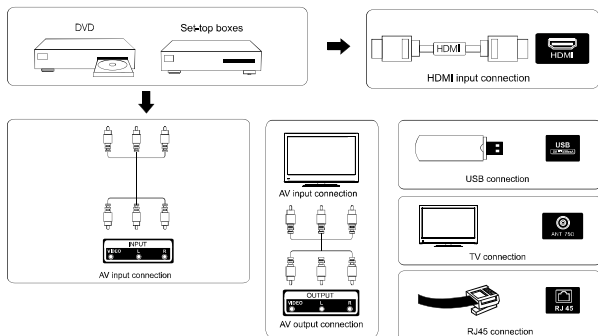

## TV Install And Connect

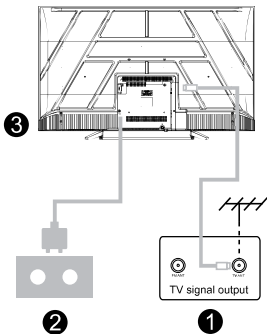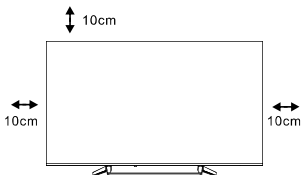  

### Set your TV

To put your TV on a firm place which can bear the weight of the TV.

To avoid danger, please don't positions the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

### Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

### Turn on TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV

Note: If the model has a CI card slot on its top, a silicone plug for the CI card slot can be found in the accessory bag (for models without CI card slot, there is no such silicone plug), please insert the silicone plug into the slot when the CI card is not in use.



 
Note: Picture for reference purposes only.

## TV Stand Installation Instructions

1. Open the carton and remove the TV and scattered accessories and base (some models without base).
2. In order to avoid damaging the TV, please cover it with soft mattress, put it on the table, face down on the soft material and screw the neck of the base to the TV.
3. Screw the base and connected to the TV.
4. The installation is complete.


### Note:

Picture for reference purposes only.  
Please prevail in kind.



### Suggestion:

 To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

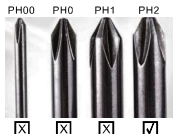

# Initial Setup

 
## 1. Initial Setup

For the initial setup, on-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.

### 1.1 Pairing Bluetooth Remote


1. Press 'BACK' and 'Home' simultaneously on remote control to enter the Bluetooth pairing mode.

The indicator light on remote control will flash when starting the pairing mode.

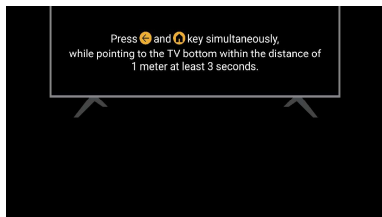


### 1.2 Language select

 Use  $\wedge$ / $\vee$  buttons to select system languages, then press [OK] to confirm.

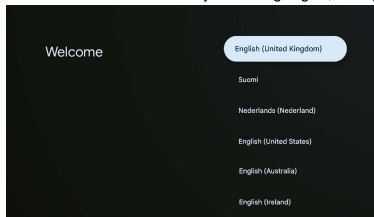

### 1.3 Region or Country select

 Use  $\wedge$ / $\vee$  buttons to select your region or country, then press [OK] to confirm.

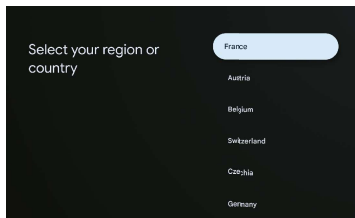


## Initial Setup

### 1.4 Set up with the Google Home app

Follow the instructions in the Google Home app.

Note: You may choose "Set up on TV instead".

 
Not all countries support the Google Home app, and Setup code are different on different TV, please refer to the actual software.

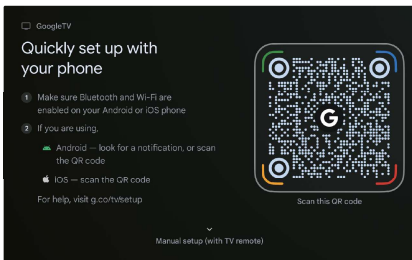

### 1.5 Select TV mode (Home/Retail)

Please be sure in this step, select "Home" if you are using this TV at home.

 
Make sure to confirm once you have selected "Home".

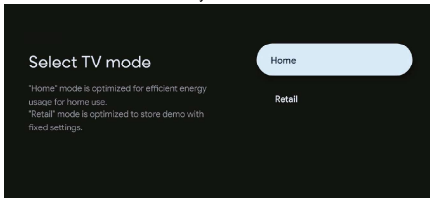

### 1.6 Configure the WiFi network

Press  $\Delta$ / $\nabla$  buttons to select Wi-Fi you wish to connect, enter the password, and then confirm to connect.

 
If you select "Skip", it could be performed in homepage or settings menu.

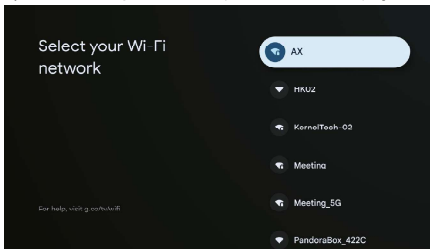

## Initial Setup


### 1.7 Terms of Service

 By accepting the Terms of Service to improve the product experience, select **"Accept"** to proceed with this condition.

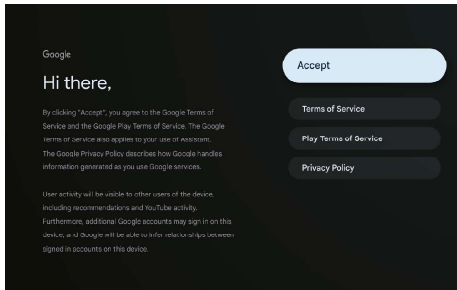

### 1.8 Google Services

 To learn more about a service, select it below. Data will be used according to Google's Privacy Policy. Select Accept to confirm.

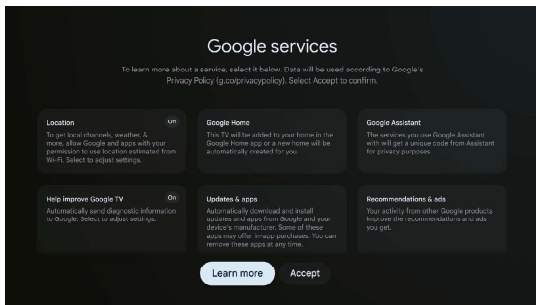


### 1.9 Tuner mode Setting

Select Antenna/Cable/Satellite to scan TV channel.


If you select **"Next Step"**, the channel scan could be performed in menu.
 
## Initial Setup

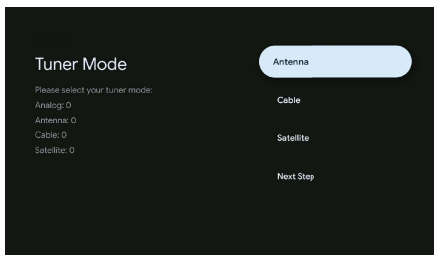

### 1.10 Play Auto Installs

 Select to install or uninstall recommended apps by using this process.

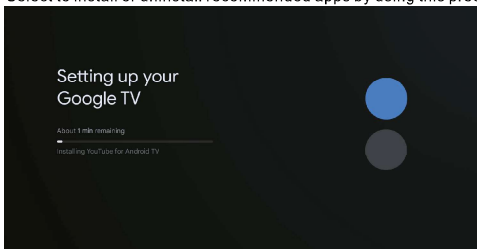


### 1.11 Get the most out of your Google TV™

 
You may set up additional optional features for a more personalised experience. Select "Go to Google TV" to go to the home page.



# HOME

## 2.HOME

Once you have completed initial setup, you will now enter the home by screen or press  button to display the homepage.

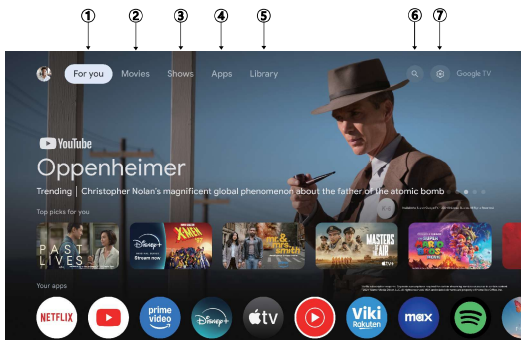

\*Some countries home screen UI may display different from above image, please refer to the product for details.

### ① For you

Browse 400,000+ movies and TV episodes from across your streaming services — in one place, and organized by the genres and topics that interest you the most.

### ② Movies & ③ Shows

Watch your favorite movies and shows or discover new favorites all in one place.

### ④ Apps

Download and access your favorite apps to discover movies, shows, games, and more.

### ⑤ Library

Keep all your shows and movies in a single watchlist. Add from your TV, phone, or browser - no matter which app its on.

### ⑥ Search

Thousands of movies and shows at the sound of your voice. Ask Google to quickly find what you want to watch.

### ⑦ Settings

 
Allows to set various performance of your TV.

# Settings

## 3.Settings

Allows to set various performance of your TV.


- 1.Press </> button to select "Settings" which is in the upper right corner of the screen.
- 2.Press ^/∇button to select the option which you want to adjust in the Settings menu.
- 3.Press **[OK]** to enter.

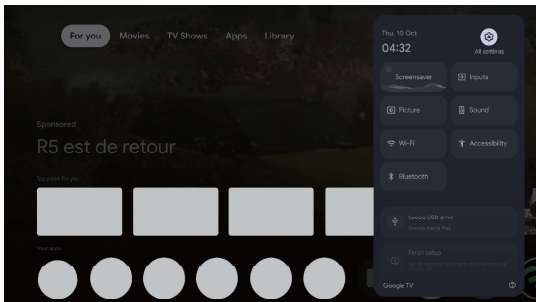

### Channel and inputs

Display the scan sub-menu based on different channel installation modes.

 - 1.Press ^/∇ button to select "**Channel and Inputs**".
- 2.Press **[OK]** to enter "**Channels**", then press ^/∇choose Analog,Antenna,Cable etc to scan the channels.
- 3.Press ^/∇button to select "**Inputs**", press **[OK]** to enter "**Inputs**", then press ^/∇choose HDMI,Composite etc.

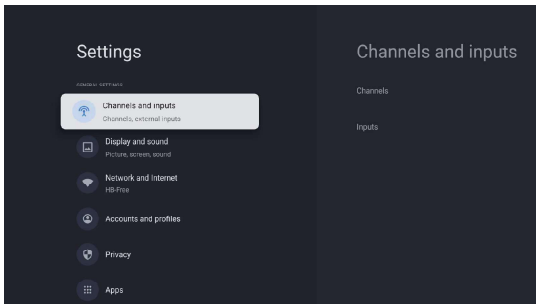


## Settings

### Network and Internet


Adjust all network setting and check connection if you have connection problems.

 1. Press  $\wedge/\vee$  button to select "Network and Internet" in the settings menu.
2. Press  $\wedge/\vee$  button to select: Wi-Fi/Add new network/Scanning always available/network privacy policy.

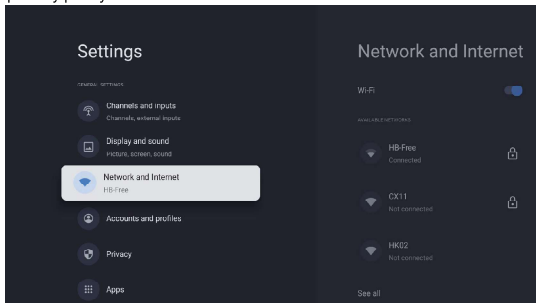

### System

 
1. Press  $\wedge/\vee$  button select the options of Ambient mode, Power and energy, About, Date and time, Language, Keyboard ect.
2. Press **[OK]** to jump to the corresponding sub-option.

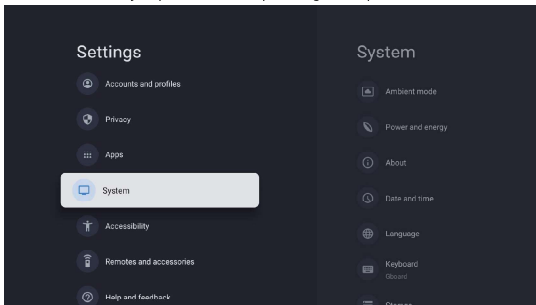

### About


1. Press  $\wedge/\vee$  button to check additional information such as System update, Device name, Restart, Status, and more.
2. Press  $\leftarrow$  button to return to the previous menu.  
Press  $\leftarrow$  button to exit the menu.
 
## Settings

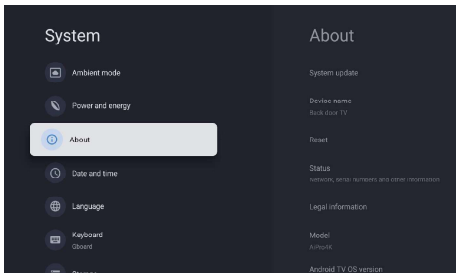

### Factory reset

 
If Factory reset is selected, it will erase all data from your device's internal storage, including: your Google Account, system and app data and settings, and downloaded apps.

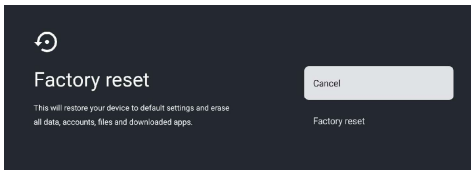


## Tv Source setting

### 4. Tv Source setting

To enter TV source in Homepage:

 
1. Press  button or Select "Live TV" on Homepage.

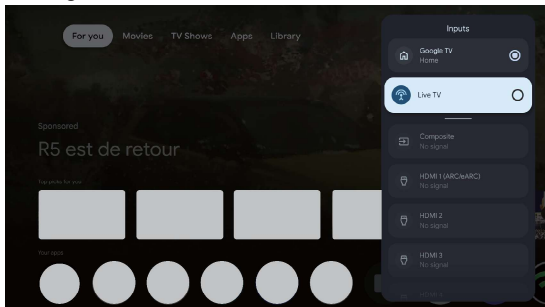


## Accounts & sign-in

### 5. Accounts & sign-in

 
To have access and to download applications, you must sign in with a Google Account.

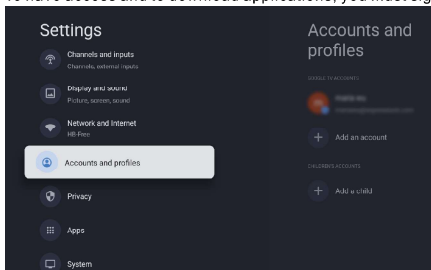

 Once you open Google Play, you will be promoted to sign in or create a new account.

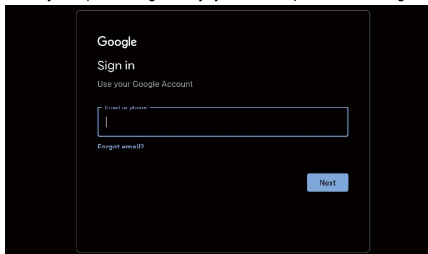

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or go to the search button, and search via entering text or talk to Google to search for apps using your voice.

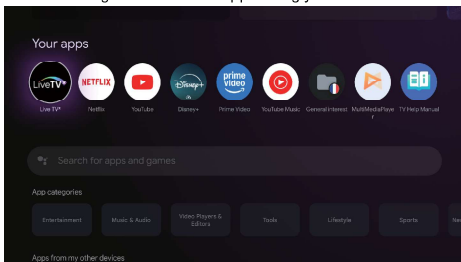

\* The above pictures are for reference only, please refer to the product for details.

## Help

No power	<ul style="list-style-type: none"> <li>• Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.</li> </ul>
Signal not received properly	<ul style="list-style-type: none"> <li>• Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna.</li> <li>• If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>• Check if the antenna at the back of the TV is connected properly.</li> <li>• View other channels to see if the problem still occurs.</li> </ul>
Video appears with no audio	<ul style="list-style-type: none"> <li>• Try increasing the volume.</li> <li>• Check if the TV's sound is on mute or not.</li> </ul>
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> <li>• Try adjusting the contrast and brightness.</li> </ul>
Static noise affects video and audio quality	<ul style="list-style-type: none"> <li>• Check if the antenna at the back of the TV is connected properly.</li> </ul>
Broken lines on screen	<ul style="list-style-type: none"> <li>• Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.</li> </ul>
Remote doesn't work	<ul style="list-style-type: none"> <li>• Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control.</li> <li>• The TV will go into Standby mode if it receives no response in a few minutes.</li> </ul>
No video (PC mode)	<ul style="list-style-type: none"> <li>• Please check if the cable is connected to the HDMI port correctly, or if the cable is bent in some places.</li> </ul>
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> <li>• Adjust the brightness or contrast in the main menu.</li> </ul>
No response from the PC	<ul style="list-style-type: none"> <li>• Check if the PC's display resolution is set to a compatible resolution for the TV.</li> </ul>
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> <li>• Make sure you are using a cable in good quality.</li> </ul>
Problems are unresolved	<ul style="list-style-type: none"> <li>• Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact the service center.</li> </ul>

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.



Manufactured under license from Dolby Laboratories.  
Dolby, Dolby Audio, and the double-D symbol are trademarks  
of Dolby Laboratories Licensing Corporation.



The terms HDMI and HDMI High-Definition Multimedia Interface,  
and the HDMI logo are trademarks or registered trademarks of  
HDMI Licensing LLC in the United States and other countries.

#### WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only using furniture that can safely support the television set.
3. Ensuring the television set is not overhanging the edge of the supporting furniture.
4. Not placing the television set on tall furniture (for example, cupboards or bookcases), without anchoring both the furniture and the television set to a suitable support.
5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
6. Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Wall-mounted screw: 22-24 inch M4, 28-70 inch M6, 75 inch M8

Note: Don't hang at an angle to avoid the risk of falling off.

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Google Cast built-in, Google Home, and other marks are trademarks of Google LLC. Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

#### NOTICE CONCERNING RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

#### DECLARATION OF CONFORMITY

Herewith we state that this product complies with the requirements of below directives:

RED Directive 2014/53/EU

ERP Directive 09/125/

RoHS Directive 2011/65 EU & EU2015/863

amended by the CE-Marking Directive 93/68/EEC

The detailed declaration of conformity can be found at [www.fandu.gr](http://www.fandu.gr)

#### KALLIOPI KARYDA & CO LP

87A, 17th November Str. | P.C. 55535

 
Pylea | Greece

T: 2316006600

Web: [www.fandu.gr](http://www.fandu.gr)

## Remote control

- ① Switches the TV between on and standby mode.
- ② Indicator light
- ③ Mute or restore your TV sound.
- ④ **INFO:** Displays the present channel information such as the current time and channel name.
- ⑤ **TEXT:** Press to enter Teletext when play the program.
- ⑥ **Google Assistant:**  
Talk to Google to control your TV using your voice.
- ⑦ **Profiles:** Switch between profiles.
- ⑧ **Setting:** In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function.
- ⑨ **Navigation buttons:** Cursor UP/LEFT/RIGHT/DOWN.
- ⑩ **Back:** Press to move back through menus.
- ⑪ **Live Guide:** Open the Live TV EPG.
- ⑫ **HOME:** Displays the home screen.
- ⑬ **Live TV:** Press it to enter Live TV.
- ⑭ **Inputs:** Display/Select signal source options.
- ⑮ **NETFLIX:**  
Connects to NETFLIX for viewing online TV shows and films (internet connection required).
- ⑯ **YouTube:**  
Connects to YouTube (internet connection required).
- ⑰ **Prime video:**  
Connects to Prime video (internet connection required).
- ⑱ **Disney+:**  
Connects to Disney+ (internet connection required, some regions may not support it).
- ⑲ **Audio:** Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).
- ⑳ **SUBT:** Close Caption.
- ㉑ **USB:** Press to enter Multimedia Player.
- ㉒ **Media control:** Fast forward/back  
Play the last/next program  
Play/Pause program

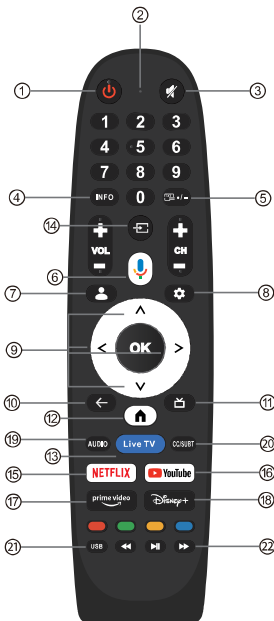

\*Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

\* Google TV is the name of this device's software experience and a trademark of Google LLC.  
Google, YouTube and YouTube Music are trademarks of Google LLC.