

UNITED®

RECHARGEABLE HANDHELD MILK FROTHER USER MANUAL



Model No: HM-7143

GENERAL SAFETY INSTRUCTIONS

1. This appliance is designed for domestic use only. No responsibility is accepted for damage resulting from use non-compatible with the instructions.
2. The device is used only for coffee, various cocktails, sauce vinaigrette, baby food, milk shake etc.
3. Do not operate the appliance if the power cord shows any signs of damage. If the supply cord is damaged, it must be repaired by a qualified person to avoid a hazard. Improper repairs may place the user at serious risk.
4. Always handle the power cord with care. Do not pull or strain the power cord. The power cord may never be folded or pinched. Always pull the plug to disconnect the power cord, never pull on the cord to disconnect it.
5. Do not let the cable resting against a hot surface or hanging on the edge of the table.
6. Do not immerse the appliance in water or any other liquids.
7. Do not operate the appliance with wet hands.
8. Do not use any accessories not recommended by the manufacturer. It may cause injury and device destruction.
9. The device should always be disconnected from the mains when not in use. Always switch OFF ('0' position) and unplug the appliance if it is not in use and before moving, cleaning and/or assembling or disassembling it.
10. Before disconnecting the device from the socket, press the powder button in position OFF.
11. Never insert your fingers or any other objects (hair, clothes, cooking utensils, knives, screw drivers etc.) near the axle when the appliance is in use.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Read all the instructions carefully before you use the appliance and keep them for future use.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

15. Children should be supervised to ensure that they do not play with the appliance.
Children of less than 3 years should be kept away unless continuously supervised.
Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.

Getting Started

Before you use this product for the first time, please take a few moments to read these instructions and keep it for future reference.

1. To protect against risk of electrical shock, do not immerse the device in water or other liquids. This may cause damage of the product.
2. To protect against fire, do not operate the unit in the presence of explosive and / or flammable fumes.
3. Do not use the unit for other than intended use.


This product is intended for domestic household use only.

Keep the unit away from children.

Instructions For Use

1. Connect the chosen whisk to the main unit.
 2. Press the power button once, to set speed 1: the corresponding blue LED will light up. Pressing the power button one more time, the unit stops.
 3. Press the power button again to set to speed 2: two blue LEDs will light up. Pressing the power button one more time, the unit stops.
 4. Press the power button again, to set speed 3: three blue LEDs will light up. Pressing the power button one more time, the unit stops.
- To froth the milk, it is advisable to first heat it and then to operate the product with the milk whisk, dipping it in the milk and moving it up and down repeatedly for a few minutes, until the desired volume of foam is reached.
 - To prepare matcha tea, pour the tea into a little water and mix with the milk whisk until you get a dark green paste. Then add more water, hot or cold.
 - To whip eggs, cream or mix other food, use the proper whisk.

Product description (Overview)

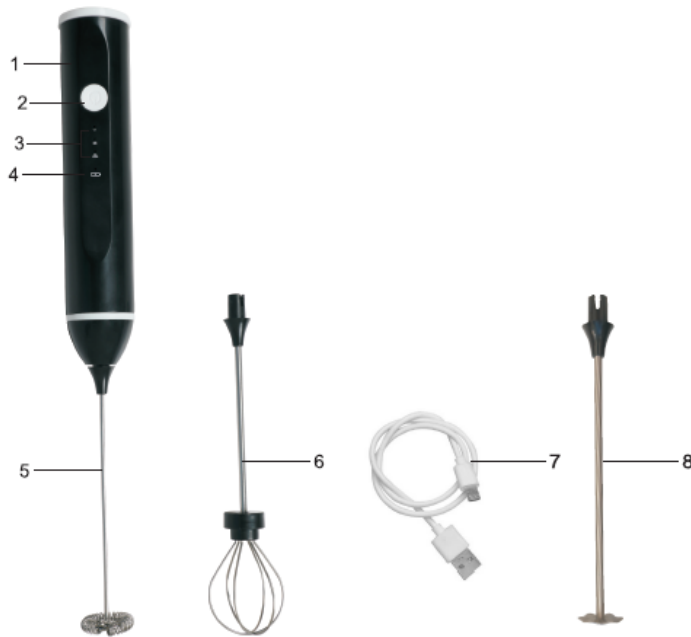

1. Main unit
2. Power / speed selection button
3. 1 - 2 - 3 speed LED
4. Charging LED
5. Whisk whipping milk
6. Egg / cream whisk
7. USB cable
8. Flat whisk

Cleaning

- To clean the coffee mixer, dip the metal rotating paddle with warm water and wipe dry with a clean cloth.
- Do not immerse the unit in water or place it in the dishwasher.
- Your unit works with rechargeable Lithium batteries.
- Full charge lasting time: 5~6 hours till empty.
- Working lasting time: 2~3 hours.
- Full charge takes: 2 hours.

Charging With USB Cable

When you feel the speed is turning slow, it means you must charge your mixer.

A 50cm USB cable is included in the packing, you can connect the machine to charge it. The battery light will turn red color to white when it is fully charged.

Then the machine is ready to use again.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, we state that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & Delegating Directive (EU) 15 / 863

The detailed declaration of conformity can be found at:

www.united-electronics.gr



KALLIOPI KARIDA & CO, LP

87A, 17is Noemvriou str,

P.C. 55535, Pylaia, Greece

T: +302316 006600

www.united-electronics.gr