

UNITED®

MICA HEATER INSTRUCTIONS MANUAL



Model : UHM-889

This product is only suitable for well insulated spaces or occasional use.

Dear consumer, please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

1. Technical data

| MODEL NO. | VOLTAGE | FREQUENCY | POWER |
|-----------|----------|-----------|-------|
| UHM-889 | 220-240V | 50/60Hz | 2500W |

2. Product structure diagram:



1. Safety rack
2. Power light
3. Temperature control rotary switch
4. Power switch
5. Front board
6. Bobbin bracket
7. Air outlet
8. Net
9. Back cover
10. Feet
11. Castors

GENERAL SAFETY WARNING

1. Read all instructions carefully before using.
2. Make sure the voltage is the same as that indicated on the rating plate of the appliance.
3. Do not operate this appliance if the cable or plug becomes damaged.
4. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
5. If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Ensure the appliance is switched off before connecting to the mains power supply.
7. Switch off the power supply and disconnect from mains supply when not in use, before cleaning or other maintenance.
8. Turn off the light Switch, disconnect the power supply.
9. The heater must not be located directly below a socket-outlet.
10. Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
11. Indoor use only.
12. In order to avoid overheating, do not cover the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner.
14. Do not touch the hot surfaces.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
16. Always ensure your hands are dry before operating or adjusting any switch on the product or touching the plug and socket-outlet.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 18.. Children should be supervised to ensure that they do not play with the appliance.
19. Do not leave this appliance unattended when it is in use.

20. The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by disconnect the appliance and vacuum cleaning air vents and grilles.

21. Do not place the heater on carpet, don't place the cable under carpets. Arrange cord away from traffic areas so that it will not be tripped over.

22. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

- do not use this heater if it has been dropped;
- do not use if there are visible signs of damage to the heater;
- use this heater on a horizontal and stable surface.

23. Do not store away until the heater cools down, store the heater in a cool dry location when not in use.

24. When in use, keep a distance between windows (walls) of at least 50cm



WARNING: In order to avoid overheating, do not cover the heater.

WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance

 
 
USE

1. Turn the switch to “I” position, the heater blows warm air and operates at 1000W.
2. Turn the switch to “II” position, the heater blows warm air and operates at 1500W.
3. Turn the switch to “III” position, the heater blows warm air and operates at 2500W.
4. Turn the switch to “O” position, the heater stops operating and the indicator light will be off.



ASSEMBLY

- Insert the wheels into the bottom part of the supporting feet, and make sure that it is tight enough.
- Turn the appliance upside down, fix the feet to the appliance with the screw.

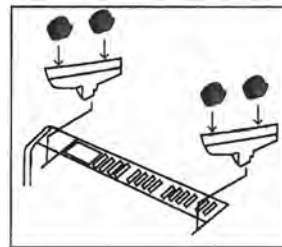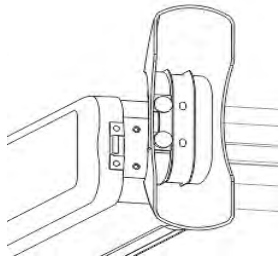

OVERHEAT SAFETY DEVICE

- This heater is protected with an overheat protection that switches off the appliance automatically in case of severe overheating. If the device operated, please turn the heater off, unplug the appliance and let it completely cool, inspect for blockage of any air inlet or outlet, and attempt to restart the heater then after.
- If the heater fails to operate or the device switches off again, please contact the nearest service center for examination or repair

MAINTENANCE


- Always disconnect the appliance and allow it completely cool down before maintenance.
- Use a vacuum cleaner to remove the dust from the grilles.
- Wipe the outside of the unit with a soft damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor allow water to get into the unit.

STORING

- Always disconnect the appliance, allow it completely cool and clean it before storing.
- If you do not use the device for a long period, put the unit back and the instruction manual into the original carton and store it in a dry and ventilated place.
- Do not place heavy items on top of carton during storing as this may damage the appliance.

| Model identifier(s): UHM-889 | | | | | |
|--|--|-----------------|------|---|-------|
| Item | Symbol | Value | Unit | Item | Unit |
| Heat output | | | | Type of heat input, for electric storage local space heaters only (select one) | |
| Nominal heat output | P_{nom} | 1,5/2,0/ 2,5 | kW | manual heat charge control, with integrated thermostat | [yes] |
| Minimum heat output (indicative) | P_{min} | 0 | kW | manual heat charge control with room and/or outdoor temperature feedback | [no] |
| Maximum continuous heat output | $P_{max,c}$ | 1,5/2,0/ 2,5 | kW | electronic heat charge control with room and/or outdoor temperature feedback | [no] |
| Auxiliary electricity consumption | | | | fan assisted heat output | [no] |
| At nominal heat output | el_{max} | N/A | kW | Type of heat output/room temperature control (select one) | |
| At minimum heat output | el_{min} | N/A | kW | single stage heat output and no room temperature control | [no] |
| In standby mode | els_B | 0 | kW | Two or more manual stages, no room temperature control | [no] |
| | | | | with mechanic thermostat room temperature control | [yes] |
| | | | | with electronic room temperature control | [no] |
| | | | | electronic room temperature control plus day timer | [no] |
| | | | | electronic room temperature control plus week timer | [no] |
| | | | | Other control options (multiple selections possible) | |
| | | | | room temperature control, with presence detection | [no] |
| | | | | room temperature control, with open window detection | [no] |
| | | | | with distance control option | [no] |
| | | | | with adaptive start control | [no] |
| | | | | with working time limitation | [no] |
| | | | | with black bulb sensor | [no] |
| Contact details | Kalliopi Karyda & Co LP 87A, 17th Noemvriou str, P.C. 55535 Thessaloniki – Greece T: +302316006600 F: +302316006650 | | | | |

 NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.



This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Kalliopi Karyda & Co LP. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15/ 863 / EU

The detailed declaration of conformity can be found at www.united-electronics.gr

EXCLUSIVE IMPORTER IN GREECE:

Kalliopi Karyda & Co LP.

87A, 17th November Str - P.C. 55535

Pylaia - Thessaloniki - Greece

T: 2316006600 | F: 2316006650

www.united-electronics.gr