



MORRIS

STAND FAN OPERATING INSTRUCTIONS

FOR MODELS: MFS-16216 / MFS-16217



READ THESE INSTRUCTIONS CAREFULLY AND STORE THEM FOR FUTURE REFERENCE!

SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the followings:

1. To prevent fire or shock hazard, **DO NOT** expose this appliance to rain or moisture.
2. Dangerous high voltages are present inside this enclosure. To avoid electric shock, **DO NOT** open the cabinet, refer servicing to qualified personnel only.
3. This appliance is intended for household use only and not for commercial, industrial or outdoor use. Other use not recommended may cause fire, electric shock or injury.
4. Ensure the fan is not placed near drapes,curtains, or any objects that may be drawn into the fan.
5. To protect against fire, electrical shock and injury to persons, do not immerse the unit, plug or cord in water or spray it with liquids.
6. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
7. No naked flames sources, such as candles, should be placed on the product.
8. Ventilation should not be impeded by covering the ventilation openings. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
9. Care required with the use of this apparatus in tropical climates. Do not use the appliance to temperatures over 40 °C.
10. Place the fan on a stable level and dry surface when operating to avoid overturning.
11. Only connect to a suitably AC 220-240V~50Hz mains socket.
12. Do not operate the fan in the presence of explosive and/ or flammable fumes. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
13. Do not operate the fan with a damaged cord or plug, after a malfunction or if it is dropped or damaged in any manner.
14. Do not operate the fan without the fan grilles properly in place.
15. Do not place the fan close to an open window. Rain splashing on the fan could cause an electric shock hazard.
16. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
17. Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance.
18. Do not use the fan if grille becomes damaged or loose.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. Switch the fan OFF and unplug it from the outlet when it is not in use, when moving fan from one location to another and before cleaning.


- 22. To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord.
- 23. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

SPECIFICATIONS

MODEL NO	RATED VOLTAGE	RATED POWER	Noise
MFS-16216/ MFS-16217	220-240V-50HZ	60W	≤67dB(A)

STRUCTURE AND PARTS

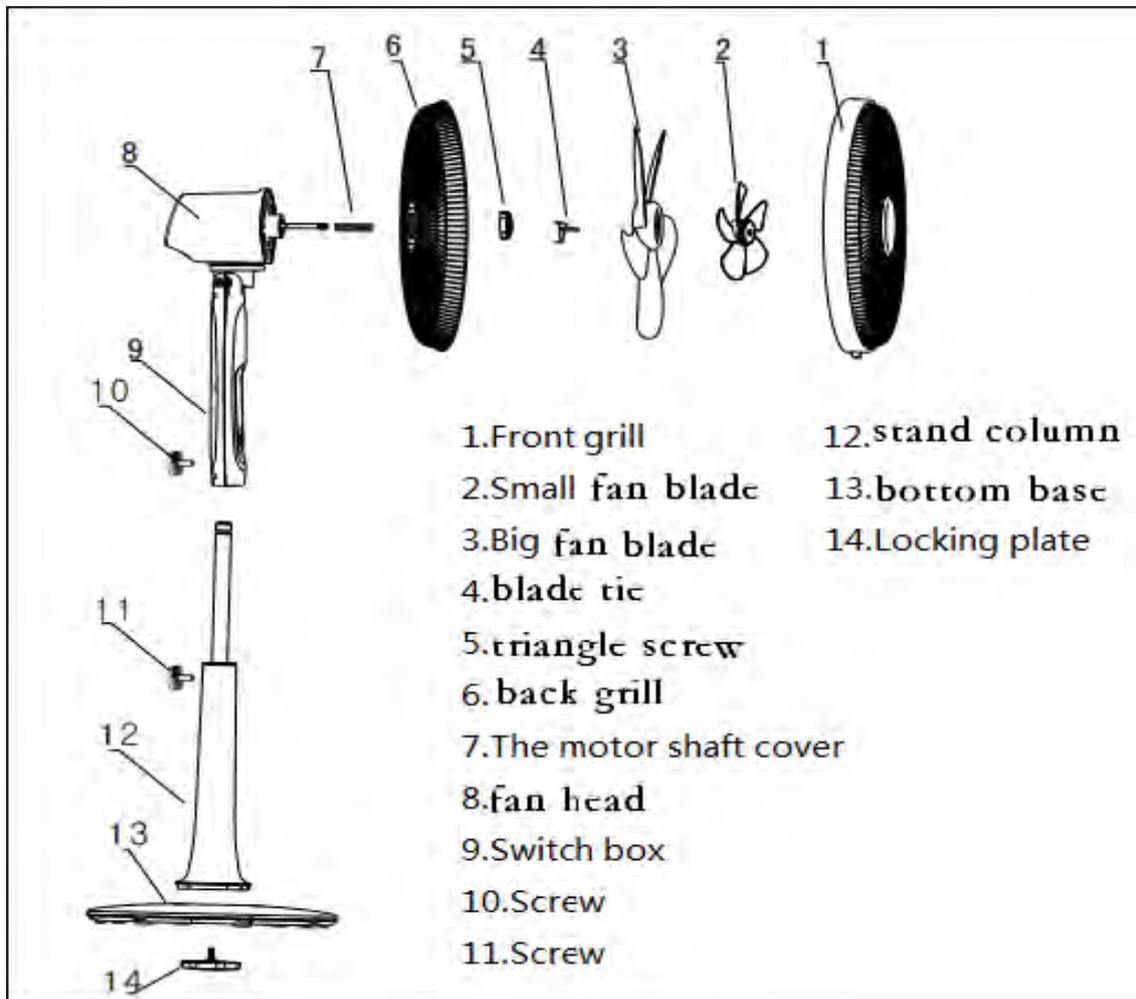



ASSEMBLE INSTRUCTIONS

The fan is packaged with its foundation and other parts unattached. You must attach them before operating the fan.



WARNING: Never operate the fan, without its foundation and other parts attached. Fan should operate only in upright position; any other position could create a hazardous situation.

Assemble sequence of the foundation and other parts as follow:


1. Unpack the fan and remove all parts from the package.
2. Use the bend bolt and the press plate provided, to attach the stand post parts onto the base.
3. Adjust the lift pole to the desired height, and then lock it with the locknut for lifting.
4. Loose the locknut on the switch box and insert the lift pole into the hole located on the bottom of the switch box, then fasten the locknut back tightly.

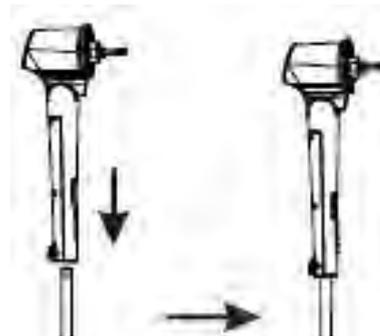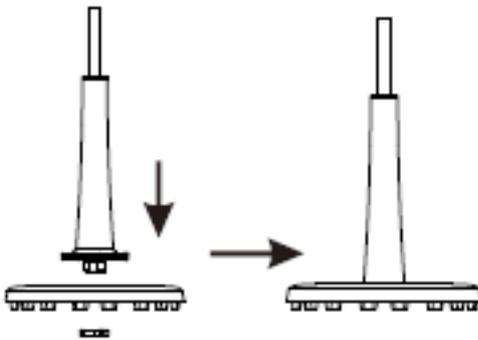

5. Take off the motor shaft cover from the fan head, and revolve the triangle screw off. Then take off the blade tie on the back grill, put the grill back, ensuring that locating pegs are engaged correctly in the three holes of the grill. Then, tighten the triangle screw counterclockwise.

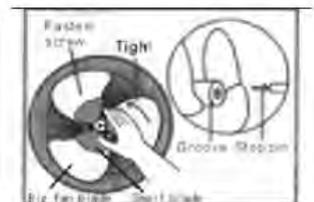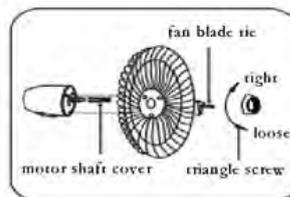

6. Push the big fan blade onto the notch, until it is stuck on the stopper pin of the motor shaft, and then tighten the small fan blade counterclockwise.

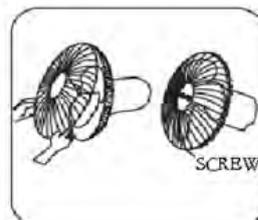

7. To attach the front grill to the back grill, use carefully the grill ring to hold them

together and fasten the grill ring with the screw provided.

INSTRUCTIONS FOR USE

Before using the fan make sure that it is on a flat and stable surface. Damage may occur if it is placed on inclined surface.

Set all switches to OFF position, and then insert the plug directly into a standard AC socket-outlet. Make certain that the plug fits tightly into the outlet.

a. Press the ON/OFF button to start the fan and select the fan speed level by pressing SPEED button. Each time you press SPEED button, SPEED level changes as per the following sequence: 1 → 2 → 3 → 4 → 5 → 6 → 1

Speed selection is circulated and the speed pilot lamp will be on, during the fan's operation.

b. Press MODE button to choose your desired wind mode. Each time you press the button, mode changes as per the following sequence:

Normal wind → nature wind → sleeping wind → normal wind

Wind mode selection is circulated and wind mode pilot lamp will be on during the fan's operation.

c. Set the time by pressing TIMER button to select for how many hours you want to set the timer. The available range is 1~15 hours. The pilot light corresponding to the selected hours will be illuminated. If you want to set 5 hours, you set 4 hours + 1 hour.

d. Press OSC button to select whether you need oscillation or not. Each time you press the button oscillation changes, as per the following sequence:

Oscillation → no oscillation → oscillation

Press ON/OFF button to turn off the fan and all pilot lights will be switched off.

Note: all above functions can be set with the remote control using the corresponding buttons (ON/OFF, MODE, TIMER, OSC) and +, - .

MAINTENANCE

- Always turn off the fan and remove the plug from the socket-outlet before cleaning.
- Clean the external surfaces of the fan with a soft damp (not dripping wet) cloth.

WARNING:

Do not immerse the fan in water.

Do not use any cleaning chemicals such as detergents and abrasives.

Do not allow the interior (special for the PCB) to get wet as this could create a hazardous situation.

- When the unit is not in use, make sure that it is unplugged from the wall socket. To store the fan, you may pack it in the original carton and store it in a cool and dry place until later use.
- In case of malfunction or doubt, do not try to repair the fan yourself; it may result in a fire hazard or electric shock.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life,

should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Amiridis-Savvidis S.A. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU

The detailed declaration of conformity can be found at www.morris.gr

Exclusive importer in Greece:

Amiridis - Savvidis S.A.

87A, 17th Noemvriou str, P.C. 55534

Thessaloniki - Greece

T: +302310944944 | F: +302310944940

www.amiridis-savvidis.gr

www.morris.gr