




MORRIS

Oil filled radiator

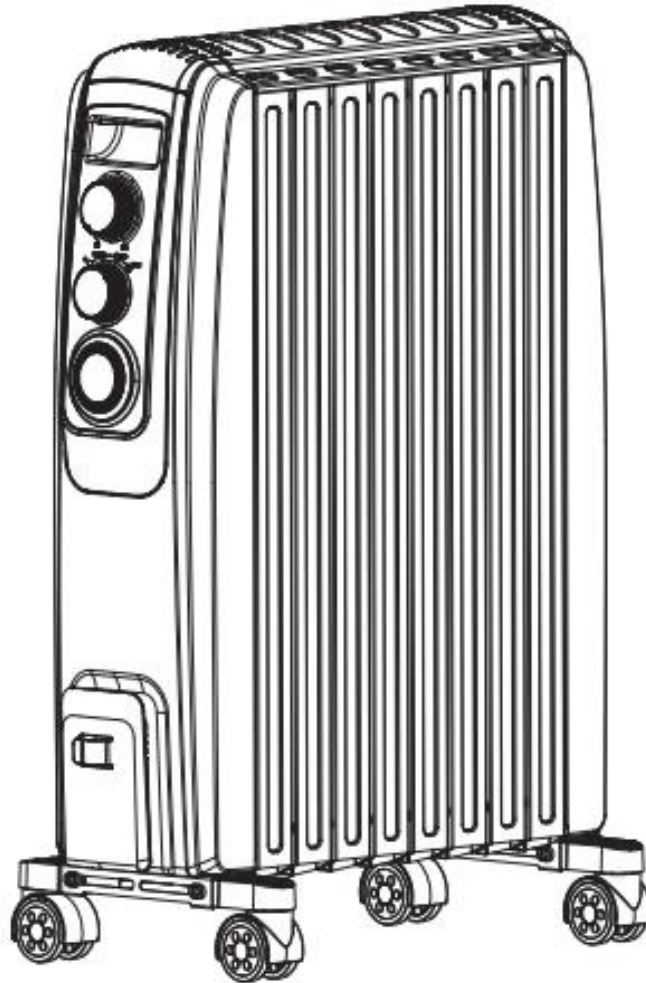

Model: MHR-20043

INSTRUCTIONS FOR USE

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS
This product is only suitable for well insulated spaces or occasional use

SAFETY RECOMMENDATIONS




1. **WARNING:** In order to avoid overheating, do not cover the heater.
2. This product is not a toy. It should not be used by children or infirm persons without supervision.
3. Disconnect from mains when not in use or when moving or cleaning.
4. Do not operate the appliance with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. The heater is hot when in use. To avoid burns, do not let bare skin touch hot surface.
6. Do not immerse cord, plug or any part of the appliance in water or any other liquid.
7. Do not use the heater in dusty environments or where flammable vapours are present (e.g. in a workshop or garage).
8. Do not place the heater on or near any other source of heat.
9. Do not cover the heater. A fire may occur if the heater is covered with or touches flammable material, including curtains, drapes, bedding etc. when in operation. **KEEP THE HEATER AWAY FROM SUCH MATERIALS.**
10. Do not use the heater in the immediate surroundings of bathtubs, showers, washing stands or swimming pools.
11. Do not locate the heater below a socket-outlet.
12. Do not let the mains lead hang over the edge of the table or work surface or touch hot surfaces.
13. Do not use outdoors.
14. Do not use the appliance for other than its intended use. This appliance is intended for household use only.
15. Do not misuse the cord or pull the cable to disconnect it from the outlet. Instead, grasp the plug and pull it to disconnect.
16. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
17. Do not insert or allow foreign objects to enter the ventilation or exhaust openings as this may cause an electric shock, fire or damage to the appliance.
18. Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
19. This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.
20. When scrapping the heater, follow the regulations concerning the disposal of oil. Do not dispose of the heater in household waste and recycle the heater where local facilities exist for electrical goods and oil.
21. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
22. Children shall not play with the appliance
23. Cleaning and user maintenance shall not be made by children without supervision
24. Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
25. Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

**PICTURES IN THE MANUAL ARE FOR REFERENCE ONLY
AND IS SUBJECT TO THE PHYSICAL PRODUCT IN THE PACKING BOX**

DESCRIPTIONS

- A- Rear handle
- B- Heater body
- C- Wheel base
- D- Front handle
- E- Adjustable thermostat
- F- Power switch
- G- Timer
- H- Cord frame
- I- Wheel

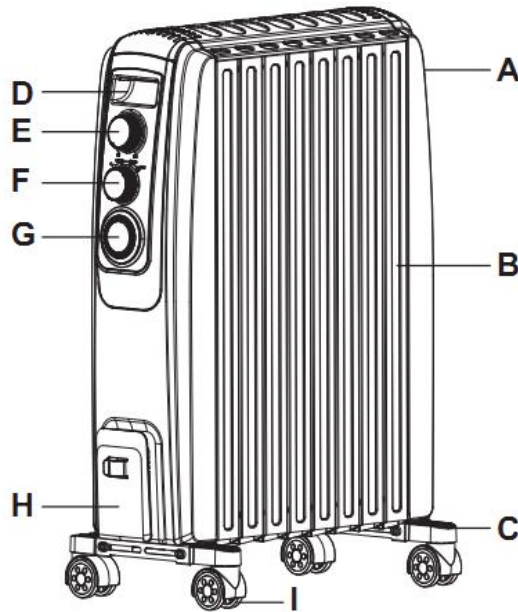

ASSEMBLY

- Turn the radiator upside-down on a scratch-free and stable surface to prevent damage to the paint finish or your floor surfacing.
- Pull out the wheel base to each side ,see Fig 1.

Only operate the radiator in normal upright position with wheels assemblies attached to the bottom.

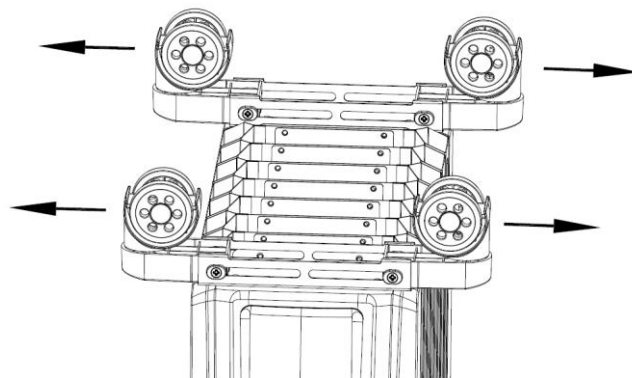


Fig 1

OPERATING INSTRUCTIONS:

1. Place the product in an upright position on a flat, steady, stable, heat-resistant surface. Make sure there is nothing flammable or heat sensitive within 1 meter (40 inches). Operating the product in any other position could cause a hazard.
2. Insert the plug into a suitable wall outlet after turning the thermostat knob counter-clockwise to the minimum position and setting the power switch to "0" for off. The heater is suitable for operation on an A.C. electricity supply having the same voltage as that show on its rating label.
3. Turn the power switch from "0" to either "LOW" (one light indicate), "MED" (two lights indicate) or "HIGH" (three lights indicate).
4. Turn the thermostat knob clockwise to "HIGH" position. When the room temperature rises to a comfortable level, slowly turn thermostat counter-clockwise until the indicator light just goes out. To adjust the room temperature turn the thermostat clockwise to raise the temperature, or counter-clockwise to lower it. Thus the heater will attempt to keep the room temperature at the desired level.
5. To turn off the heater, set the power switch to "0" position. The power indicator light turns off. Unplug the product from the electrical outlet when it is left unattended or is not in use.

TIMER SETTING OPERATION:

- 24-hour timer.
- Each segment is 15 minutes.
- First, set the current time by rotating the Timer Dial clockwise until the arrow points to the correct time.
- Next, set the times at which you want the heater to turn ON, by pushing the relevant sections outwards (towards the outside of the dial).
- For all other times, when you want the heater to be off, make sure the corresponding sections are pushed inwards (towards the centre of the dial).

PRECAUTIONS FOR USE AND MAINTENANCE

1. Always unplug the appliance and keep it away from any socket before cleaning.
2. To clean the outer surface of the appliance, use a lightly damp cloth. Then, dry it thoroughly with a soft, dry cloth before using again.
3. Do not use any cleaning or chemical products of any kind. Do not let water enter the openings on the heater. Do not use wax or products that create a shine as they can react to heat and cause discoloration.
4. When the appliance is not being used for prolonged periods, ensure that it is fully unplugged from the socket and store in its packaging for simple storage and later use. Clean your radiator as mentioned above and remove the wheels bases

Information requirements for electric local space heaters

Item	Symbol	Value	Unit	Item	Unit
Heat output Model: MHR-20043				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	2.5	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	1.0	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	2.5	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	0.00025	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	Yes
				with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	Yes
				with black bulb sensor	No
Contact details	Kalliopi Karyda&Co LP 87A, 17is Noemvriou str, P.C.55535 Pylea-Greece T:+302316006600 F:+302316006650				

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Kalliopi Karyda & Co LP states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14 / 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at www.morris.gr



Exclusive importer in Greece:

Kalliopi Karyda & Co LP

87A, 17is Noemvriou str, P.C. 55535

Thessaloniki – Greece

T: +302316006600 | F: +302316006650

www.morris.gr