




MORRIS

INSTRUCTIONS MANUAL

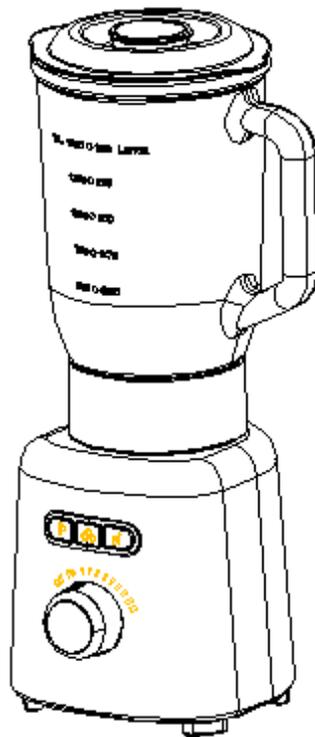

Model: S1255BL

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let the cord hang over the edge of a table or counter.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard
7. Close supervision is necessary when any appliance is used by or near children.
8. Avoid contacting moving parts.
9. Blades are sharp, so handle carefully.
10. The use of any attachment, including jar, jar lid, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
11. The appliance cannot be used for blending hard and dry substances, otherwise the blade could be blunted.
12. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
13. To protect against risk of electrical shock do not put the motor unit or power cord in water or other liquid.
14. Do not use outdoors.
15. Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
16. To reduce the risk of injury, never place cutter-assembly blades on the base without the jar properly attached.
17. Always operate the blender with the cover in place.
18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the

hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.


19. Children should be supervised to ensure that they do not play with the appliance.

20. Warning: never use hot liquids or run the appliance empty.

21. Save these instructions.

FOR HOUSEHOLD USE ONLY!

KNOWING YOUR BLENDER

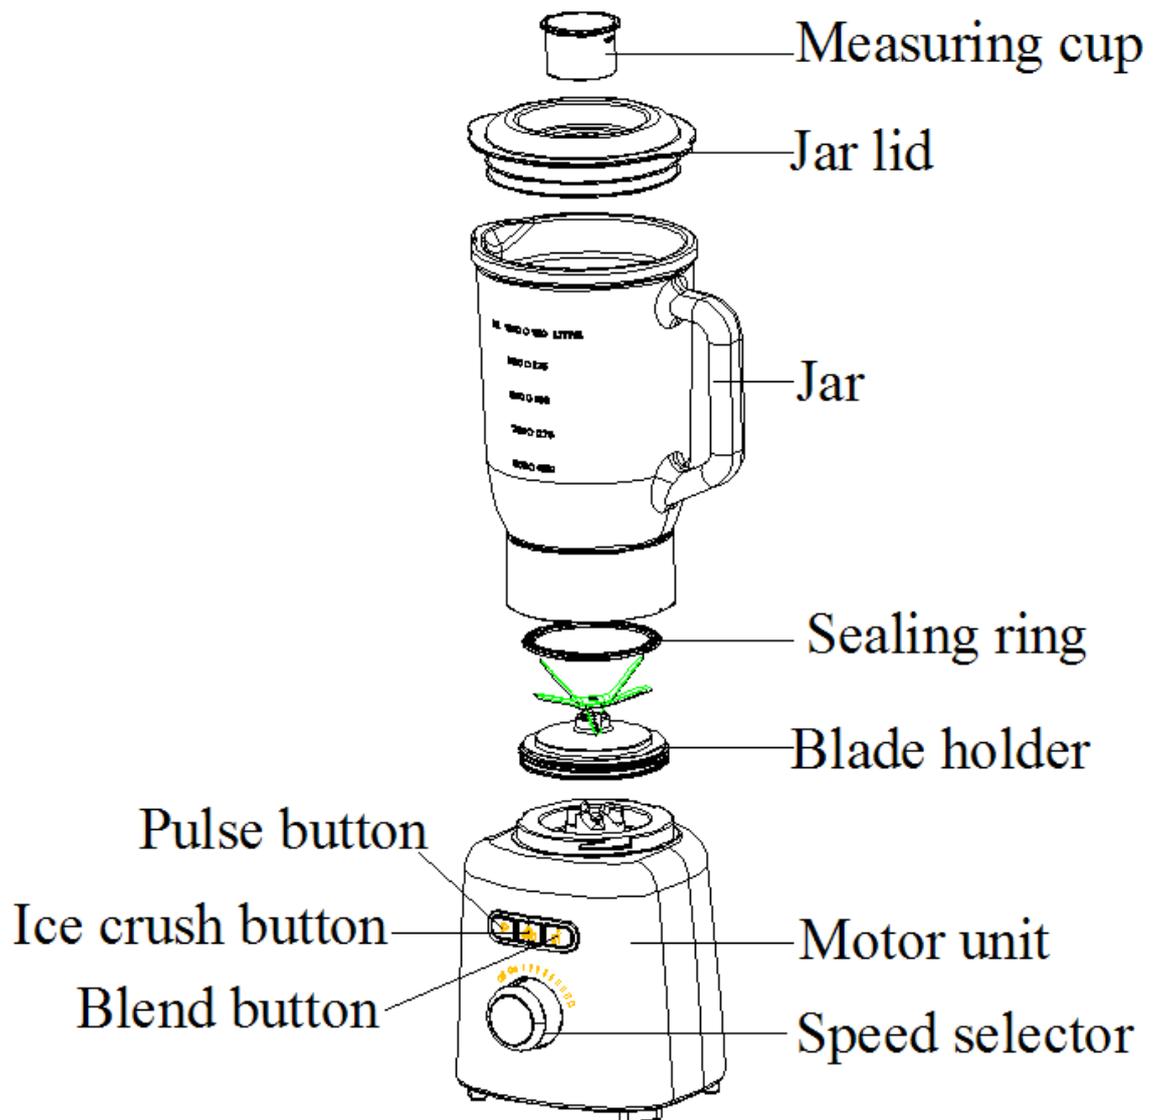

FOR THE INITIAL USE

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse the jar, jar lid and measuring cup in warm soapy water, rinse and dry them thoroughly. Never immerse the motor unit in water to prevent the risk of electric shock.

Caution: Blades are sharp, please handle carefully.

3. Assembly instructions are described in detail in the following sections.

Before assembling the jar, make sure that the power cord is unplugged from the power outlet and the speed selector is at OFF position.

The blender jar is suitable for making mixtures with juice and pulp.

To attach the jar, firstly place the jar lid, ensure that it is placed tightly and properly onto the jar. Then place the jar onto the motor unit properly.

Note: Make sure that the jar is placed properly.

BLENDING FRUIT AND VEGETABLE

1. Before assembling or attaching the power cord into the outlet, make sure the speed selector is at OFF position.
2. Peel or core the fruit or vegetables, cut into small cubes and put the pieces into the jar. Usually certain amount of water is also needed, to facilitate the smooth operation of the appliance. Proportion of food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar.

RECIPE

<u>FOOD TYPE</u>	<u>SPEC</u>	<u>WEIGHT</u>	<u>SPEED</u>
<u>Carrot (apple, pear etc.)</u>	<u>Cut into</u> <u>15mm*15mm*15mm</u>	<u>Carrot: 600g</u> <u>Water: 900g</u>	<u>High speed</u>

Note: Never use boiling liquids or run the appliance empty.

3. Place the jar lid in position tightly. Connect the plug to the power outlet and turn the speed selector to ON position.
4. Turn the speed selector to adjust the speed. The speed selector is a stepless speed knob, the speed is gradually increased by turning clockwise.
5. You may add ingredients into the jar during operation, through the center opening of the lid, and then replace the measuring cup if necessary. You just need to press down the measuring cup directly to fix it tightly.

6. The max operation time per cycle must not exceed 3 minutes. Minimum 3 minutes rest time must be maintained between continuous two cycles.
7. Turn the Speed control knob to OFF position once the mixture has been blended to your desired consistency.
8. Remove the jar from the motor unit, carefully take off the jar lid, then pour and serve.

FUNCTION BUTTONS

When the speed selector is at ON position, you can use the following three function buttons:

Pulse button: you can press and hold it if you want to accelerate the process of blending.

Ice crush button: if there is ice in your ingredient, you can press it to process food. The unit will operate at MAX speed and stop automatically after finishing.

Blend button: the unit will operate at MAX speed for 60s, then stop automatically.

CLEANING AND MAINTENANCE

The Auto Clean feature can clean the blender and blade assembly easily and rapidly in complete safety.

-After use, reassemble the jar and pour a little warm water into it and turn the speed selector to Pulse position for a few seconds to remove the residual food.

-After stopping, remove the jar from the motor unit and rinse the jar under running water.

-Wipe the outer surface of the motor unit with a damp cloth, do not use abrasive cleansers. Never immerse in water or other solution for cleaning.

-Dry all parts and then reinstall them.

Warning: Do not use abrasive cleaners. Never immerse in water for cleaning.

Note: The blade is very sharp, handle carefully when clean.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Amiridis-Savvidis S.A. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU

The detailed declaration of conformity can be found at www.morris.gr



Exclusive importer in Greece:

Amiridis – Savvidis S.A.

87A, 17th Noemvriou str, P.C. 55534

Thessaloniki – Greece

T: +302310944944 | F: +302310944940

www.amiridis-savvidis.gr