


MOUNTING METHOD

Fix the safe in the place which is not easy to move.


- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counter clockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten all screws.

⚠ **CAUTION:** Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

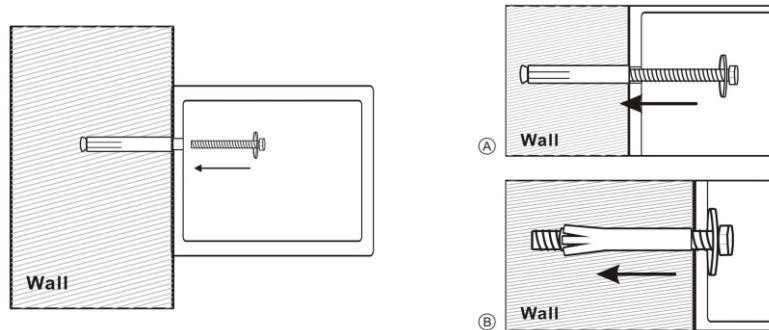

For any help, kindly consult the local distributor

NOTICE ABOUT RECYCLING

 Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Declaration of Conformity

Herewith, below Company states that product SFH-1170, complies with the requirements of below directives:

EMC Directive 14 / 30 / EU,
RoHS Directive 11 / 65 / EU & 15 / 863 / EU
CE-marking Directive 93 / 68 / EEC



The detailed declaration of conformity can be found at www.united-electronics.gr

KALLIOPI KARIDA & CO., LP

87A, 17is Noemvriou str, P.C. 55535
Pylaia, Greece
T: +302316006600 - F: +302316006650
www.united-electronics.gr

UNITED®

INTELLIGENT ELECTRONIC LOCK SAFE

MODEL: SFH-1170


⚠ **Please do not keep emergency keys in your safe!**

Dear valued customer:


Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

Schematic drawing of case

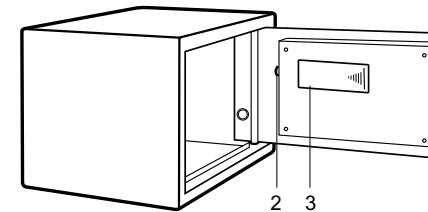

Schematic drawing of control panel

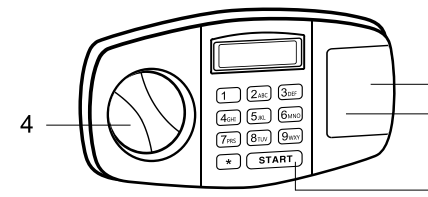

- | | |
|------------------------|---------------------------------|
| 1. Bolts | 5. Emergency Lock Cover |
| 2. Reset Button | 6. Start button |
| 3. Battery Compartment | 7. Power Supply: 4 AA batteries |
| 4. Knob (Master Key) | |

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first opening, users should open the safe with the emergency key. The operation in details refers to "opening the safe with the emergency key".

- Remove emergency lock cover, then insert the emergency key, and turn it count clockwise.
- Turn the knob (master key) clockwise to open the door.

⚠ **CAUTION:** Finish operation, pull out the emergency key and keep it in a safe place.

INSERTING THE BATTERIES

- Open the door.
- Insert 4AA batteries into the battery compartment.
- Under normal condition, if the LED display shows "LO-BAT", you should change the batteries after entering "START" button.

⚠ **CAUTION:** Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs. When outage for thirty minutes or longer, you should reset the user code.

OPENING DOOR

- Press "START" button, and the LED display will show "----".
- Input your user code (6 digits), The code lock will be unlocked with the green light on the key pad.
- Turn the knob (master key) clockwise and open the door.

⚠ **CAUTION:** The user preset code "123456".The code lock has the function of auto-locking, and if there is not any operation after inputting the code, the lock will lock automatically again. If inputting wrong code for three times, the lock will lock automatically for 3 minutes.

CLOSING DOOR

- Turn the knob (master key) counter clockwise to close the door.

SETTING THE USER CODE

- With the door open, press "START" button, the LED display will show "----".
- Input your new user code(6 digits), and press the "RESET" button to confirm.
- The display will show "USER-IN" to indicate the code setting is successful. So now you can use your safe box by new code.

SETTING THE MASTER CODE

- With the door open, press the "RESET" button, the LED display will show "----".
- Then press the "START" button, and "----" on the LED display will stop flashing, which indicate the lock has enter into the state of code setting.
- Input any 6 digits code, LED display will show "SUPER-IN"
- The display will show "SUPER-IN" to indicate the master code setting is successful. So now you can use your safe box by new code.

OPENING THE SAFE IN EMERGENCY

Upon first receipt of the safe, or either the electronic circuit malfunction or codes unknown. You could also use the emergency key to open the safe.

- Remove the cover of the emergency lock.
- Insert the emergency key to the key hole, turn count clockwise, then turn the knob (master key) clockwise to open the door.

