

# **UNITED**®

## **SANDWICH MAKER SM-2176**



### **INSTRUCTIONS MANUAL**

**Read and save these instructions for future reference**

## Important

- Read these instructions for use carefully before using the appliance and save them for future reference.
- Before connecting the appliance ensure that voltage indicated on the appliance corresponds with the mains voltage in your home.
- Connect the appliance to an earthed wall socket
- Position the appliance so that:
  - the power cord is not hanging over the edge of the table or sink;
  - children cannot touch it when in use;
  - it is standing on a flat surface with sufficient free space around it.
- Never put the power cord near to or in contact with the hot surface of the appliance.
- Always preheat the cooking plate before starting to cook.
- Unplug the appliance after use.
- Do not leave the appliance in operation without supervision.
- Avoid touching the metal parts as they become very hot.
- Never use sharp or abrasive items in contact with the cooking plate as this will damage the nonstick surface.
- Always clean the appliance after use. First unplug and allow the appliance to cool down. Never immerse the appliance into water. Avoid water running into the appliance.
- If the mains cord of this appliance is damaged, it must only be replaced by their service representative, as special tools and/or parts are required.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.

## Before using for the first time

- Clean the baking plates with a damp cloth or sponge.
- Slightly grease the baking plates with a little butter or cooking oil.
- Plug in the sandwich maker and heat up the plates until the green Ready to cook pilot light goes on .
- The sandwich maker is ready for use

**Note:** when using this sandwich maker for the first time, a fine smoke haze may result. This is normal because of the initial heating of the internal components.

## Making toasted sandwich

- Put the mains plug into the wall socket. The red power light will illuminate to show that the sandwich maker is heating.
- Prepare the bread and filling for your sandwich while sandwich maker is pre-heating.
- Wait until the green on pilot light gets on, the sandwich maker is then at the correct

temperature for use.

- To obtain an even golden brown result, you can slightly butter the side of the bread in contact with the plate.
- Lay the slices of bread with the buttered side on the lower cooking plate, place the filling and cover with the second slices of bread with buttered side up. For optimal result, fillings should be placed well within the sandwich slices.
- Lower the upper cooking plate carefully onto the bread until the sandwich maker is tightly clamped.
- Open the sandwich maker after 2-3 minutes and check whether the toasted sandwich is sufficiently 'brown'. The cooking time required to obtain crisp brown sandwiches depends on the type of bread, fillings and your personal taste.
- Use a non-metallic utensil (e.g. Wooden spatula) to remove the toasted sandwich maker. Do not use sharp or abrasive kitchen utensils.
- Unplug the sandwich maker from the wall socket after use.

### **Using the waffle Plates**

- When the ready indicator light illuminates, pour prepared waffle batter, into the center of each well, on the lower waffle plate, spread it out with a heatproof, plastic or wooden spatula, then close the lid.
- Cook the waffles for approximately 5-10 minutes, depending upon the degree of browning desired: check periodically by opening the lid.
- Remove the waffles by gently loosening the edges from the waffle plate with a heatproof, plastic or wooden spatula.
- Once cooking is complete, unplug from the mains power to turn it off. Leave the lid open and allow to cool down. Once cool the waffle plates can be removed.

**Note:** During cooking, the green "ready to cook" pilot light cycles on and off, to maintain the appliance at the correct temperature.

### **Cleaning:**

Never use aggressive or abrasive cleaning agents and materials, as this damages the non-sticker coating of the plates.

1. Unplug the appliance.
2. Let the appliance cool down properly in open position.
3. First remove excess oil from the plates with a piece of kitchen paper before you clean them.
4. Use a wooden or plastic spatula to remove stick food residues (for example solidified cheese) from the cooking plates.

Do not use metal, sharp or abrasive utensils.

5. Clean the cooking plates with a moist soft cloth or sponge.
6. Clean the outside of the appliance with a moist cloth.

### **Never immerse the appliance into water.**

Never use an abrasive cloth as it will damage the coating of the plate.

The appliance can be stored in a vertical position

**This appliance is not intended to be operated by means of an external timer or separate remote-control system**

Operating Voltage: 220-240V~ 50/60Hz

Power: 750W

### **NOTICE ABOUT RECYCLING**



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

### **DECLARATION OF CONFORMITY**

Herewith, Amiridis-Savvidis S.A. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

ErP Directive 09/125/EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU



The detailed declaration of conformity can be found at [www.united-electronics.gr](http://www.united-electronics.gr)

### **Exclusive importer in Greece:**

Amiridis – Savvidis S.A.

87A, 17<sup>th</sup> Noemvriou str, P.C. 55534

Thessaloniki – Greece

T: +302310944944 | F: +302310944940

[www.amiridis-savvidis.gr](http://www.amiridis-savvidis.gr)

[www.united-electronics.gr](http://www.united-electronics.gr)