

UNITED®

INSTRUCTIONS MANUAL

12" BOX FAN

MODEL: UBF-1249



Please read these instructions carefully before you use the appliance for the first time and keep them for future reference.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
2. Dangerous high voltages are present inside this enclosure. To avoid electric shock, **DO NOT** open the cabinet. Refer servicing to qualified personnel only.
3. This appliance is intended for household use only and not for commercial, industrial or outdoor use. Other use not recommended may cause fire, electric shock or injury.
4. Ensure the fan is not placed near drapes, curtains, or any objects that may be drawn into the fan.
5. To protect against fire, electrical shock and injury to persons, do not immerse the unit, plug or cord in water or spray it with liquids.
6. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
7. No naked flames sources, such as candles, should be placed on the product.
8. Ventilation should not be impeded by covering the ventilation openings. Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
9. Care required when using this apparatus in tropical climates. Do not use the appliance at temperatures over 40 °C.
10. Place the fan on a stable level and dry surface when operating, to avoid overturning.
11. Only connect to a suitable AC 220-240V~50Hz mains socket.
12. Do not operate the fan in the presence of explosive and/ or flammable fumes. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
13. Do not operate the fan with a damaged cord or plug, after a malfunction or if it is dropped or damaged in any manner.
14. Do not operate the fan without the fan grilles properly in place.
15. Do not place the fan close to an open window. Rain splashing on the fan could cause an electric shock hazard.
16. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
17. Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance.
18. Do not use the fan if the grille becomes damaged or loose.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. Switch the fan OFF and unplug it from the outlet when it is not in use, when moving the fan from one location to another and before cleaning.
22. To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord.
23. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
24. Do not misuse the cable. Never carry the appliance by the cord or pull it to disconnect from outlet.
25. Arrange cord away from traffic areas, to provide non-tripping.

FOR HOME USE ONLY

WARNING! DO NOT use the fan in the following areas:


- * Near an open flame, a hot burner, oven or other source of high heat.
- * On a soft surface (such as carpet) or where it may tip over during use.
- * Outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area, near a sink, washer, pool or any source of water).
- * On a window or near curtains.
- * In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed

HOW TO OPERATE

1. Before first use, it is important to follow the instructions in this manual, even if you think you are familiar with this kind of device.
2. This device is designed to operate on standard outlet. Not intended for commercial or industrial use. The fan is safe and easy to use.

PARTS DESCRIPTION

1. Louver switch
2. Speed switch
3. Timer switch
4. Louver
5. Fan blade
6. Front Housing

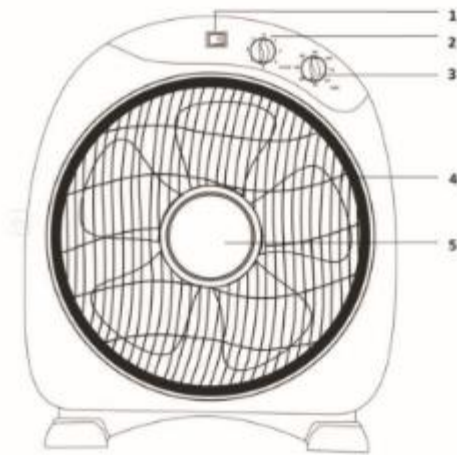

Louver switch

By positioning the switch to MOVE, the mask will be rotated continuously, swirling a breeze in all directions.

Turn the switch back to STOP and turn the grill to the desired angle. If blocked, a ratchet safety, is incorporated to the mask to prevent damage. The ratchet mechanism realizes the resistance and reverses the rotation of the mask in an attempt to release the obstruction.

Speed adjustment

Turn the switch to 1 for low speed adjustment and 3 for high speed. To turn off, return to 0.

Timer Function

You can choose the operation time of the fan (maximum 2 hours) by turning the timer clockwise. The unit is switched off at the end of the set time. The unit can be turned off at any time, by turning the timer to the OFF position.

NOTE: The product uses a mechanical clock mechanism, which will continue clocking unless overridden manually. DO NOT press the timer to get it to the position 60 manually. Let it operate and get there on its own.

CARE AND CLEANING

1. Always unplug electrical appliances before cleaning.
2. Avoid contact with moving fan parts.
3. Do not spray liquids. Do not immerse the fan in water or other liquids.
4. To clean, wipe with a damp sponge.

NOTE: If the supply cord of this device is damaged, the repair should be done only by a qualified technician

IMPORTANT: This unit is for household use only.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre. In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, we state that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU

The detailed declaration of conformity can be found at www.united-electronics.gr



Kalliopi Karyda & CO. LP

87A, 17^{is} Noemvriou str, P.C. 55535

Pylea – Greece

T: +302316006600

www.united-electronics.gr