

UNITED®

CONVECTOR HEATER WITH TURBO FAN **USER INSTRUCTIONS**




Model: UCH-886

This product is only suitable for well insulated spaces or occasional use.

IMPORTANT Read these instructions fully before using the heater. Retain these instructions for future reference.

ASSEMBLY OF THE HEATER

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings

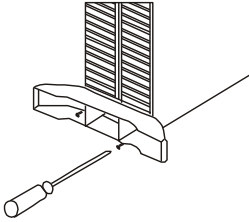


SAFETY INSTRUCTIONS (to be read before operating the heater)

- Do not use the heater unless the feet are correctly attached.
- Ensure the power supply of the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
- Keep the mains lead away from the hot body of the heater.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Never place the heater where it may fall into a bathtub or other water container.
- Do not use outdoors.
- Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
- Do not place the heater on carpets having a very deep pile.
- Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
- Do not position the heater in front of, or immediately below, a wall socket.
- Do not insert any object through the heat outlet or air intake grilles of the heater.
- Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Always unplug the heater when moving it from one location to another.
- Do not use the heater if the power cord is damaged. If the power cord is

damaged it must be replaced by a recognized service agent or other qualified person.

-The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

-Do not cover. If covered, there is the risk of overheating or even fire. 

-In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

-Children of less than 3 years should be kept away unless they are being continuously supervised.

-Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way, and that they understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

-CAUTION- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

OPERATION OF THE HEATER

NOTE:- It is normal when the appliance is turned on for the first time or when it is turned on after having not been used for a long period of time, for it to emit some smell and fumes. This will disappear when the heater has been on for a short while.

Choose a suitable location for the heater, taking into account the safety instructions above.

Insert the plug of the heater into a suitable socket.

Turn the THERMOSTAT fully in a clockwise direction to the maximum setting.

Turn on the heating elements by means of HEATER SWITCHES on the side panel. **You may obtain three heating settings (750/1250/2000W) by turning the heater switch knob in a clockwise direction.**



When the desired room temperature has been reached, the thermostat should be turned slowly anti-clockwise until the thermostat is heard to click off and the indicator light on the side panel is seen to go out. After this, the heater will keep the air temperature in the room at the set level by switching on and off automatically.

This appliance also incorporates an internal fan, which can be switched on independently of the heating elements.

Fan Operation: - This is operated by means of the switch with the fan symbol alongside it. The fan will only operate with the thermostat in the "on" position. It can be used when the heating elements are "on" to blow warm air into the room. In warm conditions the fan can be used with the heating elements at "off" to blow cool air into the room.

PROTECTION AGAINST OVERHEATING

-An additional fitted safety thermostat protects the heater against overheating and switches it off automatically. The service lamp then goes out.

-If the device switches itself off, disconnect the mains plug from the socket. The heater is ready for service again after a short cooling-off phase (approx.15 minutes). Plug the mains plug back into the socket.

-If this repeats itself, first check whether the thermostat switch is set correctly or if any objects hinder the heating operation.

CLEANING THE HEATER

Always unplug the heater from the wall socket and allow it to cool down completely before cleaning.

Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER

When the heater is not used for long periods of time, it should be protected from dust and stored in a clean dry place.

Note: this appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience

and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Model identifier(s):		UHC-886			
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	1,9	kW	manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P_{min}	0	kW	manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	$P_{max,c}$	1,9	kW	electronic heat charge control with room and/or outdoor temperature feedback	[no]
Auxiliary electricity consumption				fan assisted heat output	
At nominal heat output	el_{max}	0	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el_{min}	0	kW	single stage heat output and no room temperature control	[no]
In standby mode	el_{sb}	0	kW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[yes]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details	Kalliopi Karyda & Co LP 87A, 17th Noemvriou str, P.C. 55535 Thessaloniki – Greece T: +302316006600 F: +302316006650				

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Kalliopi Karyda & Co LP states that this product, complies with the requirements of below directives:

EMC Directive 14/30/EU

Low Voltage Directive 14/35/EU

ErP Directive 09/125/EC

RoHS2 Directive 11/65/EU & 15/863/EU

CE-marking Directive 93/68/EEC

The detailed declaration of conformity can be found at

www.united-electronics.gr



Exclusive importer in Greece:

Kalliopi Karyda & Co LP

87A, 17th Noemvriou str, P.C. 55535

Thessaloniki – Greece

T: +302316006600 | F: +302316006650

www.united-electronics.gr