

UNITED®

USER'S MANUAL

MICA HEATER

Model: UHM-787

 


This product is only suitable for well insulated spaces or occasional use.

Please read this instruction manual carefully before operation!

Keep in a safe place for future reference.

Product Appearance

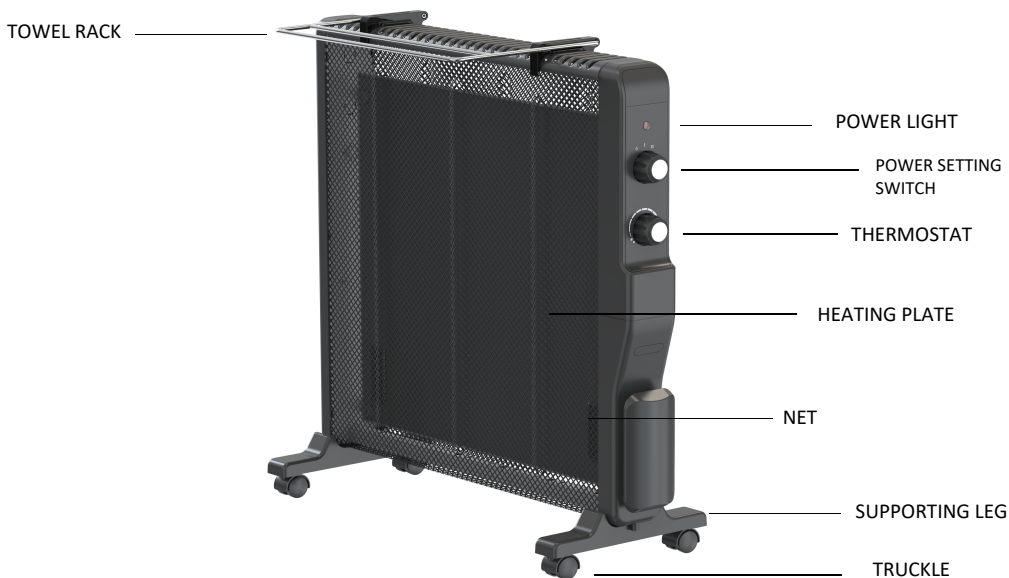

Precautions for Safe Use

- Please read the product manual carefully before using the heater.
- Insert the plug into the socket (requirements for socket and power cord: AC 230V, 50/60Hz, ≥10A). The heater must not be located below a fixed socket.
- Please operate according to the instructions of the manual. Any unrecompensed operation can cause fire, short circuit and personal injuries.
- Unauthorized extension of power cord is not allowed to avoid fire caused by overheating of the extension part.

- Do not cover grilles, block entry or exits of airflow by placing the appliance against any surface. Keep all objects at least 1 metre from the front, side and rear of the appliance.
- Do not locate in areas of high foot traffic, ensure the power cord and heater are in view to avoid accidents.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Since the heater can generate heat, do not touch the hot surface with uncovered human body to prevent burns. In case that children, animals or lame people and people lacking self-discipline are on the spot and left unattended, avoid using the appliance.
- Do not use the appliance to dry clothes.
- Never use the heater outdoors.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Also, do not immerse in liquid or use the appliance near water as this could create an electrical shock hazard.
- If the power cord is damaged, it must be replaced by the manufacturer or its maintenance agent or a similarly qualified person in order to avoid potential hazards.
- Do not use if there are visible signs of damage to the heater.
- To avoid current overload, do not share the use of a single socket with other appliances.
- Do not remove the plug from the power socket until the appliance has been switched off.
- Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided. Move the appliance only with plastic part before it cools down enough

- Never cover anything on the heater during use.
- Never use the product with automatic power-on programmer, timer or other types of installations.
- In case of product failure, please contact after-sales service agent for inspection and repairing. Unauthorized disassembling and replacement of parts are not allowed.
- The product shall be packed properly to prevent it from dust and kept in a well-ventilated, dry place.

CAUTION:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.


Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

Heater Specifications	
Model No.	UHM-787
Heat Settings	1250/2500W
Rating:	230V~,50Hz

ASSEMBLY INSTRUCTIONS

 1. Position the heater carefully upside down.
2. Press the wheels to the hole ,then place screws in center round hole of foot base and screw in tightly with a screwdriver.
3. Repeat for other leg
4. Turn the heater the right way up.

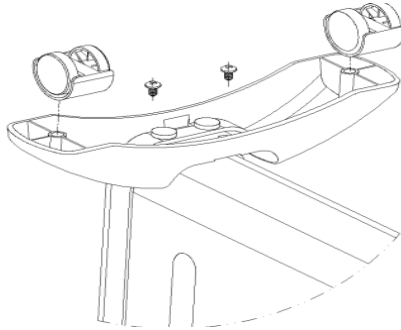


Position of the Heater

The heater should only be operated at a minimum distance of 1 metre from any wall or other object.

Position the air flow in order to optimize the heating of the room.

OPERATING INSTRUCTIONS

 - NOTE: When switched on for the first time a slight odour may be emitted for a few minutes. This is harmless and occurs with most appliances as slight traces of dust or lubricants may have collected during manufacture

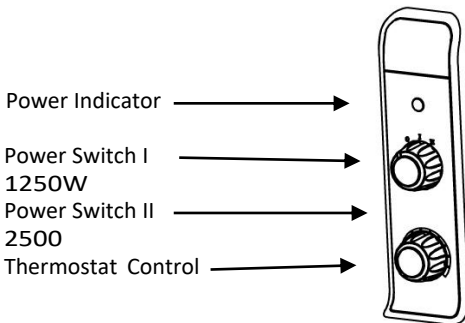

- Place the heater on a level surface in a stable upright position.
- Ensure power switches are in the “O” (OFF) position and the thermostat is in the “•” (OFF) position.
- Unwind the power cord and plug your heater into a power socket (observing the instructions regarding positioning).
- Ensure the voltage on the specification plate is the same as in your home and the power cord is lying safely on the ground.
- Switch the heater ON by selecting:
 - Power setting (I) for 1250W
 - Power setting (II) for 2500W
- The heater operates when both the power switch and thermostat function are activated.
- The red indicator doesn’t light when plugged into the power socket. It’s only on when the heater works for heating.

Thermostat Function

- Set the desired room temperature by turning the thermostat dial clockwise to the desired position. You may adjust the temperature during use. To turn down the thermostat turn the dial anti-clockwise.
- To find the ideal thermostat setting for you, first set the knob to the maximum position. As soon as the temperature is comfortable, turn the thermostat down slowly, until the heater turns off. The heater will keep the surrounding air at this set temperature by switching on and off at intervals. The indicator light lights up when the heater is on.
- To switch the heater off fully, turn the power switches to “O” and the thermostat to “•”. The indicator light will turn off also.

SAFETY FEATURES

Over-Heat Protection

- This heater is protected with an over-heat protection cut-out facility that switches it off automatically if it over-heats.
- Overheating can be caused by obstruction to the air intakes on the back of the heater or the grill on the front.
- If this occurs, please disconnect the heater from the power socket and allow it to cool for 30 minutes. Remove any obstruction and turn the heater back on.
- The heater should now operate normally. Should the problem persist, contact your nearest service centre.

Safety Cut-Out Switch

- The heater is fitted with a safety cut-out switch to switch the heater off if it is knocked over.
- If the heater is knocked over and the cut-out switch activates, turn the heater off at the power outlet and **take EXTREME care** when placing the heater upright as it will still be hot.
- Inspect the heater for damage especially to the heating elements and supply cord.
- If any damage is visible do not operate the heater.

CLEANING AND CARE

- **IMPORTANT:** Turn off the heater. Switch off the power switch and disconnect the heater from the power socket. Wait for the heater to get completely cool before cleaning.
- Vacuum clean air vents and grilles to remove dust from these areas.
- To remove dust on external surfaces, wipe the heater with a damp (not wet) lint-free cloth rinsed in hot soapy water only.
- Do not use any harsh detergent or abrasive cleaners.
- Do not spray with liquids or submerge in liquids or water.
- Do not attempt to clean the interior of the heater.
- Do not attempt to open the heater casing at any time.

STORAGE

- Store the heater carefully in a dust-free area during the off season. It is ideal to store the heater in the carton that it was supplied in. Neatly wind the cord of the heater to prevent damage to the cord.

Information requirement for the electric local space heaters

Model identifier(s):UHM-787					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	Pnom	2.600	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	Pmin	1.570	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	Pmax,c	2.600	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	
				No	
At nominal heat output	elmax	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	elmin	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	elSB	0	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	Yes
				with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	No
				room temperature control, with presence detection	No
				room temperature control, with open window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Kalliopi Karyda&Co LP 87A,17is Noemvriou str,P.C.55535 Pylea-Greece T:+302316006600 F:+302316006650				

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Kalliopi Karyda & Co., LP. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14 / 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at

www.united-electronics.gr



Kalliopi Karyda & Co LP

87A, 17is Noemvriou str, P.C. 55535

Thessaloniki – Greece

T: +302316006600 | F: +302316006650