

UNITED®

USER'S MANUAL for MICA HEATER



Model: UHM-874

This product is only suitable for well insulated spaces or occasional use.

Please read this instruction manual carefully before operation!

Keep in a safe place for future reference.

General Safety Warning:

1. Read all instructions carefully before using.
2. Make sure the voltage is the same as that indicated on the rating plate of the appliance.
3. Do not operate this appliance if the cable or plug becomes damaged.
4. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
5. If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Ensure that the appliance is switched off before connecting to the mains power supply.
7. Switch off the power supply and disconnect from mains supply when not in use, before cleaning or other maintenance.
8. Turn off the light Switch, disconnect the power supply.
9. The heater must not be located immediately below a socket-outlet.
10. Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
11. Indoor use only.
12. In order to avoid overheating, do not cover the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner.
14. Don't touch the hot surfaces.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
16. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and socket-outlet.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. Do not leave this appliance unattended when it's in use.
20. The most common cause of overheating is deposits of dust or fluff inside the appliance. Ensure these deposits are removed regularly by and vacuum cleaning air vents and grilles after disconnecting the appliance.
21. Do not place the heater on carpet, don't place the cable under carpets. Arrange cord away from traffic areas so that it will not be tripped over.
22. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

23. Do not store away until the heater cools down, store the heater in a cool and dry location when not in use.

24. When in use, keep a distance between window(wall) of at least 50cm

25. Never use the product along with an automatic power-on programmer, timer or other types of installations.


26. In case of product failure, please contact an after-sales service agent for inspection and repairing. Unauthorized disassembling and replacement of parts are not allowed.

Technical Specifications:

Model	UHM-874
Rated Voltage	220 V -240V~
Rated Frequency	50 Hz
Rated Power	2000 W

Assembly

1. Insert the wheels into the bottom part of the supporting feet, and ensure they are tight enough.
2. Put the appliance upside down, and fix the supporting feet onto the appliance with the relative screws

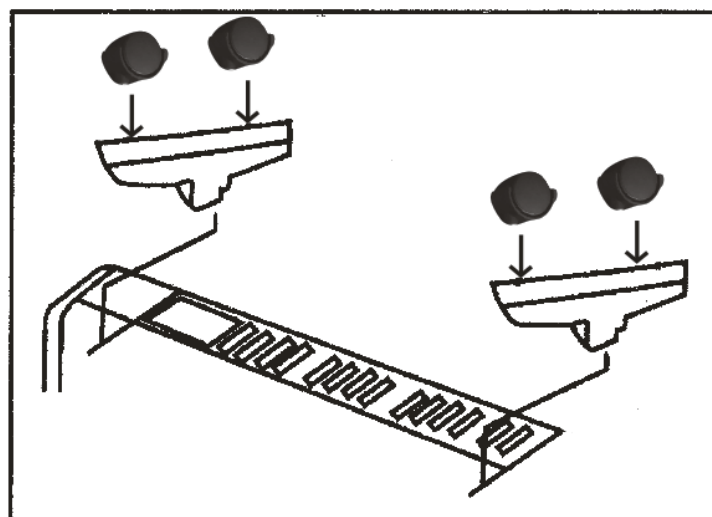

Operation:

- Connect the appliance to a suitable safety socket.
- Turn on the switch to your desired heating position (I or II).
- The heating functions(II)

Heat setting I	1000W
Heat setting II	2000W

- Turn the thermostat knob clockwise until maximum temperature.
- Once the room temperature is reached, slowly turn the thermostat knob anticlockwise until you get your required temperature.
- Turn the switch to “0” position to switch off the heater. Unplug the appliance after use.

Overheat safety device

- Your heater is fitted with a safety device that switches off the heater in the event of overheating. If the safety device is activated, please turn the heater off, unplug the appliance and let it completely cool down. Check whether the air inlet or outlet are blocked, and then try to operate the heater again.
- If the heater fails to operate or the safety device switches the heater off again, return the heater to your nearest service center for examination or repair.

Maintenance:

1. Always disconnect the appliance and let it completely cool before any maintenance.
2. Use a vacuum cleaner to remove dust on grilles.
3. Clean the outside of the unit with a damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit.

Storing:

1. Always disconnect the appliance, let it completely cool and clean it before storing.
2. If you do not use the device for a long period, put back the unit and the instruction manual to the original carton and store in a dry and ventilated place.
3. Do not place any heavy items on top of carton during storing as this may damage the appliance.

Information requirements for electric local space heaters

Model identifier(s): UHM-874					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	2,0	kW	manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P_{min}	0	kW	manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	$P_{max,c}$	1,8	kW	electronic heat charge control with room and/or outdoor temperature feedback	[no]
Auxiliary electricity consumption				fan assisted heat output	[no]
At nominal heat output	el_{max}	2,0	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el_{min}	0	kW	single stage heat output and no room temperature control	[no]
In standby mode	el_{SB}	0	kW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[yes]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
Other control options (multiple selections possible)					
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details	Amiridis – Savvidis S.A. 87A, 17th Noemvriou str, P.C. 55534 Thessaloniki – Greece T: +302310944944 F: +302310944940				

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Amiridis-Savvidis S.A. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU

The detailed declaration of conformity can be found at www.united-electronics.gr



Exclusive importer in Greece:

Amiridis – Savvidis S.A.

87A, 17th Noemvriou str, P.C. 55534

Thessaloniki – Greece

T: +302310944944 | F: +302310944940

www.amiridis-savvidis.gr