

# UNITED®



**MODEL: USF-689**

**INSTRUCTION MANUAL**

STAND FAN WITH REMOTE CONTROL


Read carefully these instructions and store them for future reference

## **SAFETY PRECAUTIONS**

When using any electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to people, including the following:

1. Read all the instructions and keep them for future reference.
2. This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Young children should be supervised to ensure that they do not play with the appliance.
4. Always unplug the appliance from the mains when not in use.
5. To disconnect the appliance, switch the control to OFF, then unplug from the mains.
6. To unplug the appliance, always grasp the plug; do not pull the cord.
7. If the supply cord is damaged it must be replaced by the manufacturer, its service agent or a similarly qualified person to avoid a hazard.
8. Do not use it outdoors. This appliance is designed for household use only.
9. Place the power cable away from areas where people walk so that it cannot be stepped on or tripped over.
10. Always use the appliance on a flat, stable surface.
11. Do not use or store the appliance where it may be exposed to water or any liquids. Do not use in or near a bathroom, near windows etc.
12. Never clean this appliance when it is plugged in. Do not immerse it in water. Clean the outside surface with a damp cloth or soft brush and dry with a soft dry cloth.
13. Use the appliance only as directed in this manual. Misuse could void your warranty.
14. Avoid contact with moving parts; never insert any objects through the grille when the fan is in operation.

To get the best out of your fan, please read these instructions carefully before using it for the first time. We also recommend that you keep the instructions for future reference, so that you can remind yourself of the functions of the fan.

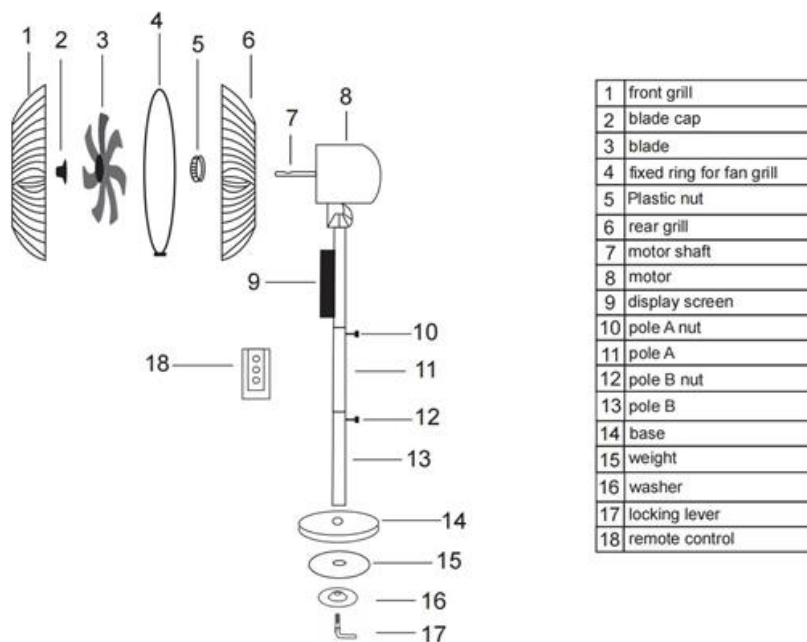


## TECHNICAL DETAILS

Model: USF-689

Rated voltage: 220-240V/50Hz

Rated power: 60W

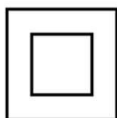

## INSTALLATION FOR STAND FAN

Please ensure that the voltage of the fan corresponds to the mains voltage.

Use the fan only for the purpose(s) defined in the user guide.

### Assembly of Pole

1. Remove the base nut from the standing pole B. And then insert the standing pole B into the hole of base, put the heavy base under the base. Fit the base nut back to the standing pole and screw it on firmly. (as shown stand fan structure from No.13 - No.17)
2. Release the pole nut, Insert the standing pole A to pole B, put the motor body to pole A and fix it by tightening the pole nut. (as shown stand fan structure from No.8-No.13).

### Rear guard assembly

Release the plastic nut (No.5) from the front of motor housing, put the rear grill to the motor and fix it by tightening the plastic nut.

### Fan blade assembly

Release the blade cap (No.2) from the motor shaft, Align the fan blade with the flat part on the motor shaft, locate fully and secure for **anticlockwise direction** by tightening the blade cap.

### Front guard assembly

With the help of another person, put the front guard in front of the back guard fix them by closing the ring.

## OPERATING INSTRUCTIONS

- **ON/SPEED:** Press the **[ON/Speed]** button once to turn on the fan and it will operate in **[Low]** speed. Press the button twice and the speed will set to **[Mid]**. Press the button for third time and the speed will set to **[High]**.
- **OFF:** To turn off the fan, press the **[OFF]** button.
- **SWING:** Press the **[SWING]** button to turn on the oscillation. Press the button twice to turn off the function.
- **WIND MODE:** Press the **[MODE]** button to cycle through normal, natural or sleep wind mode, depending on the required mode.
- **TIMER:** Press the **[TIMER]** button to activate timer sequence from 0.5H (30min) to 7.5H. Each time this button is pressed, the timer goes up by 0.5H, 1H, 1.5H and increments up to 7.5H.
- **LAMP:** Press the **[LAMP]** button to turn on/off the power light on the control panel. Please note that this function can only be used by remote control.

## IMPORTANT SAFETY MEASURES

- Never insert your fingers, pencils or other objects through the fan cage during operation.
- Switch the fan off before moving or cleaning.
- The fan should be set up on a stable and level surface to avoid it being knocked over.
- Do not expose the fan to excessive heat or humidity, as this can cause damage to the electrical components.
- Do not immerse it in any form of liquid.
- It is not advisable to expose people, in particular babies and the elderly, to a continuous stream of cold air.
- The fan should be kept out of reach of children.
- Ensure that the cable does not get caught beneath the device, in drawers, behind the shelves etc.
- Do not run the cable under carpets, rugs, etc.
- Ensure the cable is kept away from busy areas to avoid anyone tripping over it.
- Do not use it if the device or cable becomes damaged. Take it to a specialist for repair.
- For indoors use only.

## CLEANING AND MAINTENANCE INSTRUCTIONS

**TO CLEAN:** Disconnect the power cord from the mains. Remove the Front Grill and the blades carefully. Do not drop the blades! First use soft cloth with light soap to clean off oil stains, then wipe thoroughly with dry cloth. Never use polish or any corrosive liquid that will damage the paint, metal or plastic! Put back the

blades and lock the guard securely before use.


**WARNING:** Ensure that the fan is switched off from the supply mains before removing the grill. After servicing, any safety device (including grilles and blades) must be reinstalled or remounted as previously installed.

### DISPOSAL OF BATTERIES AND ACCUMULATORS

Disused batteries and accumulators do not belong in domestic refuse; they must be disposed of as prescribed by regulations.

- Bring batteries which are no longer used at the battery collection point of the dealer or of your local authority.
- Do not burn batteries. Risk of explosion!

### CORRECT DISPOSAL OF THIS PRODUCT

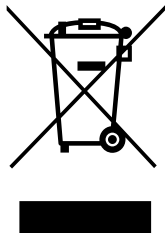

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

### DECLARATION OF CONFORMITY

Herewith, we state that this product complies with the requirements of the directives below:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14 / 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at [www.united-electronics.gr](http://www.united-electronics.gr)



#### KALLIOPI KARYDA & CO, LP

87A, 17is Noemvriou str, 55535

Pylaia, Thessaloniki, Greece

T: +302316006600 - F: +302316006650

[www.united-electronics.gr](http://www.united-electronics.gr)