

# **UNITED®**

## **TOWER FAN INSTRUCTION MANUAL**



**Model: UTF-794**

**Read carefully these instructions and  
store them for future reference**

## Safety Cautions

**When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:**

1. To prevent fire or shock hazard, **DO NOT** expose this appliance to rain or moisture.
2. Dangerous high voltages are present inside this enclosure. To avoid electric shock, **DO NOT** open the cabinet. Refer servicing to qualified personnel only.
3. This appliance is intended for household use only and not for commercial, industrial or outdoor use. Other use not recommended may cause fire, electric shock or injury.
4. Do not plug or unplug the cord with wet hands.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. Ensure the fan is not placed near drapes, curtains or any objects that may be drawn into the fan.
7. To protect against fire, electrical shock and injury to persons, do not immerse the unit, plug or cord in water or spray it with liquids.
8. The appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
9. No naked flame sources - such as candles - should be placed on the product.
10. Ventilation should not be impeded by covering the ventilation openings. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
11. Care required with the use of this appliance in tropical climates. Do not use it to temperatures over 40 °C.
12. Place the fan on a stable level and dry surface when operating to avoid overturning.
13. Only connect to a suitably AC 220-240V~50Hz mains socket.
14. Do not operate the fan in the presence of explosive and / or flammable fumes. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
15. Do not operate the fan with a damaged cord or plug, after a malfunction or if it is dropped or damaged in any manner.
16. Do not operate the fan without the fan grilles properly in place.
17. Do not place the fan close to an open window. Rain splashing on the fan could cause an electric shock hazard.
18. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
19. Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance.
20. Do not use the fan if grille becomes damaged or loose.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Switch the fan OFF and unplug it from the outlet when it is not in use, when moving fan from one location to another and before cleaning.
24. To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord.
25. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.


26. If the supply cord is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
27. Never wash out the whole unit. Putting this appliance close to the fire is also prohibited.

**WARNING! DO NOT use the fan in the following areas:**

- Near an open flame, a hot burner, oven or other source of high heat.
- On a soft surface (such as carpet) or where it may tip over during use.
- Outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area, near a sink, washer, pool or any source of water).
- In a window or near curtains.
- In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas
- Where substances are being sprayed.


**PARTS OF THE FAN**

1. Fan Body
2. Front base
3. Rear base
4. Base nut
5. Power cord
6. Remote control

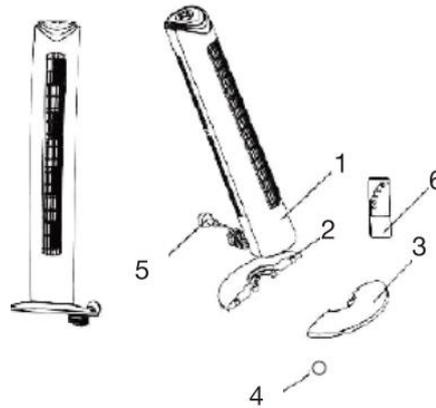


**ASSEMBLY INSTRUCTIONS**

NOTE: When assembling the tower fan, place a cloth or similar underneath it to prevent damage.

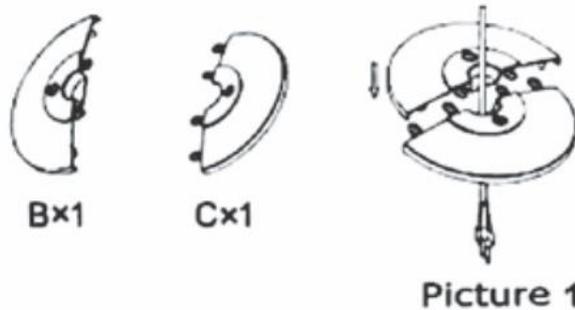

1. Place the rear section of the stand onto the base of the tower fan. Lower the front half of the stand on top of the rear half of the stand such that the two latch together, ensure that the mains cable is fed through the hole in the center of the stand.

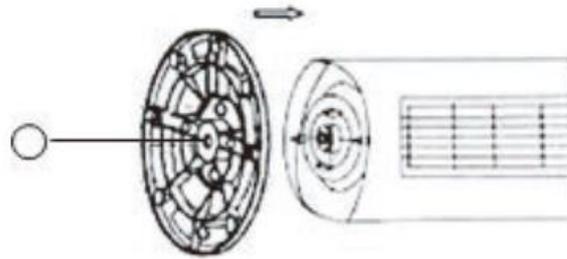

Picture 2

2. Attach the stand onto the base of the tower fan by threading the nut through the stand assembly and into the base of the tower fan.

## OPERATING INSTRUCTIONS

1. Make sure the fan is on a stable surface when operation.
2. Put the plug into the outlet.

Tower Fan Operation Instructions:



### POWER, SPEED

To turn on the fan, press “POWER” button once, it will start at low speed fan setting. To select the fan speed, continue pressing “SPEED” button to the desired speed setting (Low, Medium, High).

To turn it off, press “POWER” button once again.

### TIMER

The timer can set up to 7 hours. Continue to press “TIMER” until the timer indicators ( 0.5H/1H/2H/4H) illuminate to your desired time. It will turn off when time is reached.

### MODE

After the fan starts-up, press “MODE” to select wind mode. Press the button to choose between 3 levels of wind (NORMAL-NATURAL-SLEEP). The lights will indicate the wind mode setting.

-Normal: In this mode the fan operates at a constant speed.

-Nature: In this mode the fan simulates a natural breeze mode by cycling on and off, as in nature.

-Sleep: In this mode the fan simulates a soft, natural breeze suitable for night-time use.

### OSCILLATION

To activate oscillation, press “OSC” button once.

To deactivate oscillation, press “OSC” button once again.

## REMOTE CONTROL FUNCTIONS

1. Point the remote control at the receptor on body of the fan and press the desired button. The remote control will work at distances of up to roughly five meters (16 feet/5m max) and an angle of 30 degrees left and right of the control panel.
2. Avoid the direct sunlight to affect the operation of the remote control.
3. The batteries must be removed from the remote control before it is scrapped, and that they are disposed of safely.
4. The keys on remote control have the same functions with the same keys on the control panel of the tower fan.



## BATTERY REPLACEMENT

1. Press down the battery compartment cover and slide it out.
2. Insert one battery (CR2025) with the correct polarity.
3. Replace the battery cover.

## MAINTENANCE AND CLEANING

1. Before cleaning and assembling, fan must be unplugged.
2. To clean the exterior parts with a soft cloth.
3. Do not use any abrasive detergent or solvents. CAUTION:

Allow the product to completely cool before handling or cleaning it.

4. Do not allow water or any other liquid into the motor housing or interior parts.

## **NOTICE ABOUT RECYCLING**



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

## **DECLARATION OF CONFORMITY**

Herewith, KALLIOPI KARIDA & CO., LP states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14 / 35 / EU

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at [www.united-electronics.gr](http://www.united-electronics.gr)



### **Exclusive importer in Greece:**

KALLIOPI KARIDA & CO., LP

87A, 17<sup>th</sup> Noemvriou str, P.C. 55535

Thessaloniki – Greece

T: +302316006600 | F: +302316006650