

# UNITED®

## SPORT BLENDER INSTRUCTIONS MANUAL



**Model: SB8151**

**Read this booklet thoroughly before using and save it for future reference**



## **IMPORTANT SAFEGUARDS**

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard .
7. Close supervision is necessary when any appliance is used by or near children.
8. Avoid contacting moving parts.
9. Blades are sharp, so handle carefully.
10. The use of attachment, including jar, jar lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.
11. The appliance cannot be used for blending hard and dry substance, otherwise the blade could be blunted.
12. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
13. To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.
14. Do not use outdoors.
15. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
16. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
17. Always operate blender with cover in place.
18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
19. Children should be supervised to ensure that they do not play with the appliance.
20. Warning: never use hot liquids or run the appliance empty.
21. Save this instruction.

**HOUSEHOLD USE ONLY**

# KNOW YOUR BLENDER

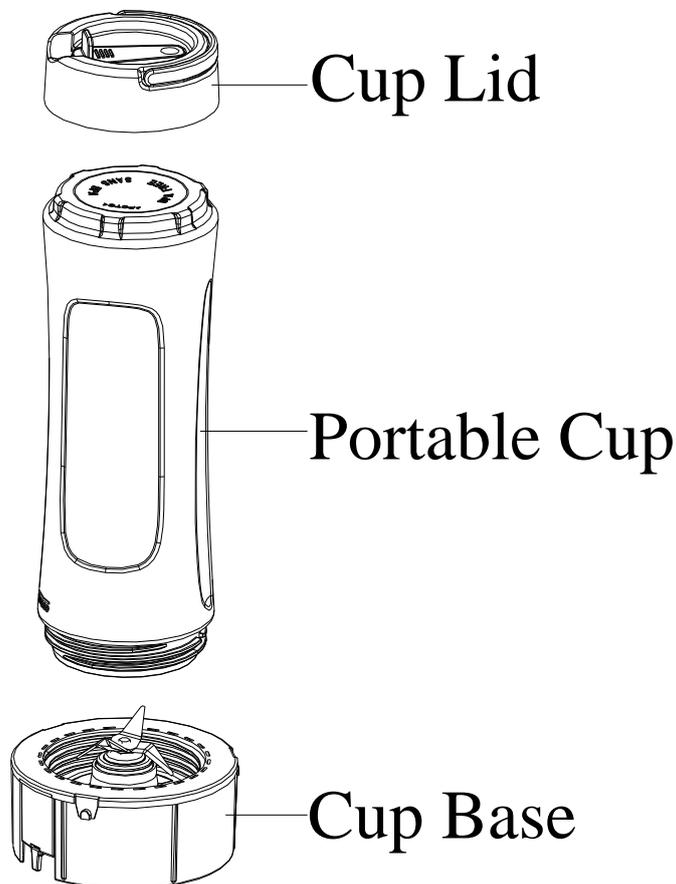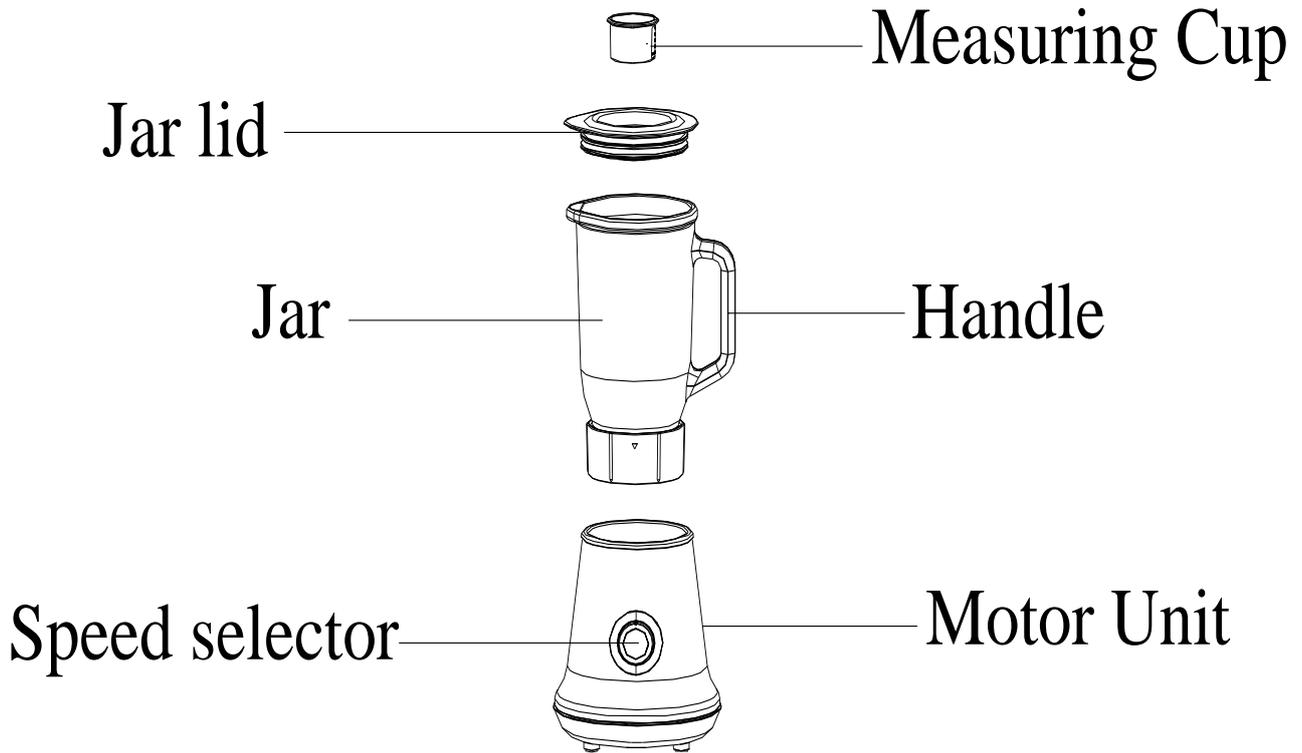

## FOR THE INITIAL USE

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse the jar, jar lid and measuring cup in warm soapy water and rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

**Caution:** The blade is very sharp, please handle carefully.

3. The correct assembly way will be described in detail in below sections.

Before assembling the jar, be sure the power cord is unplugged from the power outlet and the speed selector is on the 0 position.

The blender jar is suitable for making mixture which the juice and pulp are mixed.

For attaching jar, firstly place the jar lid into the jar, ensure the jar lid is placed tightly and properly with the jar.

And then place the jar into the motor unit properly.

**Note:** Make sure all the assembly is placed properly.

## BLENDING FRUIT AND VEGETABLE

1. Place the motor unit on the flat surface. Make sure the power outlet is unplugged.
2. Peel or core the fruit (such as apple, banana, and pear) or vegetables and then cut it into small dices, put the food pieces into the jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar

**Note:** Never use boiling liquids or run the appliance empty.

3. Place the jar into the motor unit properly, replace the jar lid tightly.
4. Connect the plug to wall outlet and the appliance will start operating.

**Note:** Before assemble or attach the power cord into the outlet, make sure the speed selector is in the 0 position.

5. Turn the speed selector to the desired setting. The setting 1 is the lowest speed and the setting 2 is the highest speed.

6. You may add ingredients into the jar through the center opening of jar lid during operation, and then replace measuring cup if necessary. You just need to press down the measuring cup directly to fix it tightly.

## RECIPE

<u>FOOD TYPE</u>	<u>SPEC</u>	<u>WEIGHT</u>	<u>SPEED</u>
<u>Carrot (apple, pear etc.)</u>	<u>Cut into 15mm*15mm*15mm</u>	<u>Carrot: 400g</u> <u>Water: 600g</u>	<u>High speed</u>

7. The max operation time per time shall not exceed 3 minutes. Minimum 3 minutes rest time must be maintained between continuous two cycles.

8. Turn the Speed control knob to 0 position once the mixture has been blended to your desired consistency.

9. Remove the jar from the motor unit, carefully take off the jar lid, then pour and serve.

## PORTABLE BLENDER FUNCTION

**This appliance is provided with a portable plastic cup for your convenient carrying and directly drinking.**

1. Place the motor unit on the flat surface. Make sure the power outlet is unplugged.

2. Place the portable cup on a flat surface with the open ending facing up. Fill the cup with your favorite ingredients. Be sure not to fill ingredients exceed the 600ml mark, you can put 240g carrot and 360g water.

**Note:** For optimal performance, place desired ingredients in the cup according to the following order: liquids, fresh ingredients, frozen fruit, yogurt and ice cream.

3. It must be noted that peeled or cored the fruit or vegetables and then cut it into small dices; general the size of fruit or vegetable dices is 15×15×15mm. The seedcase of fruit or vegetable must be peeled, such as carrot, pineapple, lemon, grape, tomato.

**Note:** Never use boiling liquids or run the appliance empty.

4. Assemble the cup base onto the opening end of the jar by turning it in clockwise.

5. Upend the assembly of cup and cup base, and insert them into the motor unit, make sure arrow on the motor unit align with the cup base, then turn the cup base in clockwise to lock them.

6. Connect the plug to wall outlet and turn the speed selector to the desired setting. The setting 1 is the lowest speed and the setting 2 is the highest speed.

**Note:** The appliance can be operated without interruption for a maximum of 3 minutes, after which it should be allowed to cool down to room temperature.

7. When the operation is finished, unplug the power outlet . Then turning the cup assembly in anti-clockwise to remove them.

8. Upend the cup assembly, hand the cup with one hand, and turning the cup base in anti-clockwise with the other hand to remove it.

9. Then assemble the cup lid on the cup. Take the cup with you throughout the day to stay hydrated. When you need to drink, you just need to open the spout lid to serve easily.

**Note:** After you have consumed your blended beverage, wash out the cup and reuse it throughout the day for water or other cold liquids.

## CLEANING AND MAINTENANCE

The Auto Clean feature can clean the blender and blade assembly easily and rapidly in complete safety.

-After use, reassemble the jar(or cup) and pour a little warm water into it and turn the speed selector to Pulse position for a few seconds to remove the residual food.

-After stop, remove the jar (or cup) from the motor unit and rinse the jar (or cup) under running water.

-Wiping the outer surface of motor unit with a damp cloth, do not use abrasive cleansers. Never immerse in water or other solution for cleaning.

-Dry all parts and then replace them.

**Warning:** Do not use abrasive cleansers. Never immerse in water for cleaning.

**Note:** The blade is very sharp, handle carefully when clean.

## **NOTICE ABOUT RECYCLING**



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

## **DECLARATION OF CONFORMITY**

Herewith, Amiridis-Savvidis S.A. states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14/ 35 / EU

ErP Directive 09/125/EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU



The detailed declaration of conformity can be found at [www.united-electronics.gr](http://www.united-electronics.gr)

### **Exclusive importer in Greece:**

Amiridis – Savvidis S.A.

87A, 17<sup>th</sup> Noemvriou str, P.C. 55534

Thessaloniki – Greece

T: +302310944944 | F: +302310944940

[www.amiridis-savvidis.gr](http://www.amiridis-savvidis.gr)

[www.united-electronics.gr](http://www.united-electronics.gr)